


Owner's Manual

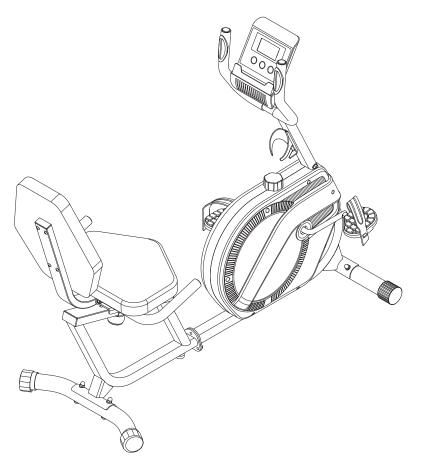

Product May Vary Slightly From Pictured.

CAUTION: Weight on this product should not exceed 300 lbs.

This Product is Distributed Exclusively by



2040 N Alliance Ave, Springfield, MO 65803 Customer Care 1 (800) 375-7520 www.staminaproducts.com

A WARNING

Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are securely tightened prior to each use. Follow all safety instructions in this manual.

When calling for parts or service, please specify the following numbers:

Model#: 15-1348

S/N: _____

STAMINA PRODUCTS MADE IN CHINA

© 2021 Stamina Products, Inc. 2021, 05

MUU Quickstart Guide

Download the app and get moving!



Go to the App Store on your device or scan the QR Code for quick access.





IR OPPANI

The müüv app provides the ability to:

✓ **Assemble Your Bike** / Watch the short video for easy set-up.

✓ Control Your Bike / Connect your smart phone via Bluetooth to start, stop, or pause your workouts and adjust your resistance as you ride.

✓ See How You're Doing / ^{View} your RPMs, resistance, speed, time lapsed and time remaining while you ride.

Receive SMART / We use your profile information, preferences, and real-time performance & bike data **Audio Coaching** / we use your with smart and adaptive training to help you reach your goals.

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google LLC.

TABLE OF CONTENTS

Safety Instructions	3
Before You Begin	5
Equipment Warning, Caution & Notice Labels	
Hardware Identification Chart	7
Assembly Instructions	8
Set Up Instructions 1	
Operational Instructions 1	
Storage 1	

Maintenance	16
Conditioning Guidelines	17
Warm-Up and Cool-Down	18
Warranty	19
Product Parts Drawing	
Parts List	
Fax/Mail Ordering Form	23

SAFETY INSTRUCTIONS

A WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

A WARNING Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

- A WARNING To reduce the risk of serious injury, read the following Safety Instructions before using the Stamina® Recumbent Exercise Bike 348.
- 1. Save these instructions and ensure that other exercisers read this manual prior to using the Stamina® Recumbent Exercise Bike 348 for the first time.
- 2. Read all warnings and cautions posted on the Stamina® Recumbent Exercise Bike 348.
- 3. The Stamina® Recumbent Exercise Bike 348 should only be used after a thorough review of the Owner's Manual. Make sure that it is properly assembled and tightened before use.
- 4. We recommend that two people be available for assembly of this product.
- 5. Keep children away from the Stamina® Recumbent Exercise Bike 348. Do not allow children to use or play on the Stamina® Recumbent Exercise Bike 348. Keep children and pets away from the Stamina® Recumbent Exercise Bike 348 when it is in use.
- 6. The Stamina® Recumbent Exercise Bike 348 is not a freewheeling exercise bike; therefore, pedal speed should be reduced in a controlled manner to prevent injury from spinning pedals.
- 7. It is recommended that you place this exercise equipment on an equipment mat.
- 8. Set up and operate the Stamina® Recumbent Exercise Bike 348 on a solid level surface. Do not position the Stamina® Recumbent Exercise Bike 348 on loose rugs or uneven surfaces.
- 9. Make sure that adequate space is available for access to and around the Stamina® Recumbent Exercise Bike 348.
- 10. Adjust the Leveling Caps(39) on the Rear Stabilizer(6) so that the bike sits on the floor without rocking.
- 11. Before using, inspect the Stamina® Recumbent Exercise Bike 348 for worn or loose components, and securely tighten or replace any worn or loose components prior to use.
- 12. Before using, always check the Seat Frame(65) to be sure it is secure. The Locking Knob(74) must be tiahtened.
- 13. Each user should adjust the seat per instructions on page 13.
- 14. Do not attempt to adjust the seat while you are on the Stamina® Recumbent Exercise Bike 348.
- 15. Consult a physician prior to commencing an exercise program and follow his/her recommendations in developing your fitness program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
- 16. Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them. Always use common sense when exercising.
- 17. Do not wear loose or dangling clothing while using the Stamina® Recumbent Exercise Bike 348.
- 18. Never exercise in bare feet or socks; always wear proper footwear such as running, walking, or cross training shoes that fit well, provide foot support, and feature non-skid rubber soles.
- 19. Be careful to maintain your balance while using, mounting, dismounting, or assembling the Stamina® Recumbent Exercise Bike 348, loss of balance may result in a fall and serious bodily injury.
- 20. The Stamina® Recumbent Exercise Bike 348 should not be used by persons weighing over 300 pounds.
- 21. The Stamina® Recumbent Exercise Bike 348 should be used by only one person at a time.
- 22. The Stamina® Recumbent Exercise Bike 348 is for consumer use only. It is not for use in public or semipublic facilities.

EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE, REGISTER YOUR PRODUCT.



NEED HELP? CONTACT US FIRST 1 (800) 375-7520 customer.care@staminaproducts.com

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

> With your body in mind, Stamina Customer Care

To enact your extended warranty and to help us better serve you, please go online and register your new product.

register.staminaproducts.com

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



ONLINE customer.care@staminaproducts.com www.staminaproducts.com











ΜΑΙΙ Stamina Products, Inc. ATTN: Customer Care 2040 N Alliance Ave Springfield, MO 65803



facebook.com/StaminaProducts facebook.com/AeroPilates

CUSTOMER CARE HOURS: Monday-Thursday, 7:30 AM-5:00 PM, Central Time Friday, 8:00 AM-3:00 PM, Central Time

BEFORE YOU BEGIN

Thank you for choosing the **Stamina® Recumbent Exercise Bike 348.** We take great pride in this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The **Stamina® Recumbent Exercise Bike 348** provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.


Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See the next page for an image of the serial decal. Model number and serial number are required when calling for assistance.

Read this manual carefully before using the **Stamina® Recumbent Exercise Bike 348**.

Providing you with a quality product is Stamina's top priority. However, sometimes there could be a missing or incorrectly sized part. If you have any questions or problems with the parts included with your **Stamina® Recumbent Exercise Bike 348**, please do not return the product. Contact us FIRST!

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on staminaproducts.com. Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

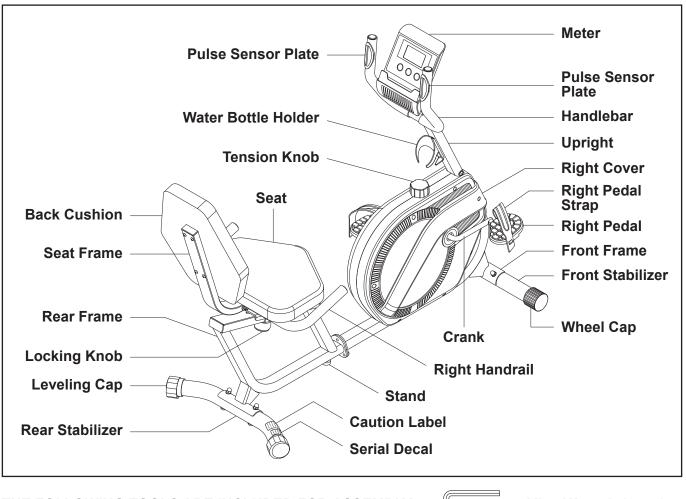

THE FOLLOWING TOOLS ARE INCLUDED FOR ASSEMBLY :

Combination Wrench

Allen Wrench (6mm)

Allen Wrench (5mm)

EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the **Stamina® Recumbent Exercise Bike 348.** Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

CAUTION LABEL(80)




SERIAL DECAL(81)



To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.

HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the fasteners used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

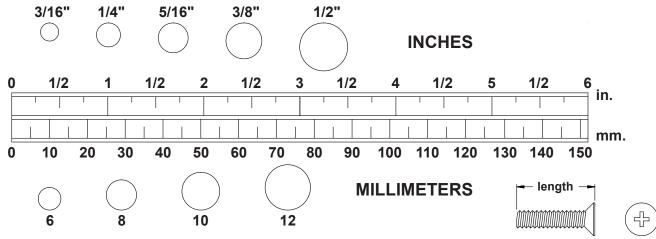

NOTICE: The length of all bolts and screws, except those with flat heads, is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.

After unpacking the unit, open the hardware bag and make sure that you have all the following fasteners. Some fasteners may be already attached to the parts.

length

Part Number and Description		
45	Bolt, Button Head (M8 x 1.25 x 15mm)	6
49	Carriage Bolt (M8 x 1.25 x 65mm)	4
48 63	Bolt, Round Head (M6 x 1 x 15mm) Screw, Round Head (M5 x 0.8 x 12mm)	4 4
53	Screw, Washer Head (M5 x 0.8 x 12mm)	2
67	Bolt, Round Head (M6 x 1 x 35mm)	4
69	Bolt, Socket Head (M8 x 1.25 x 15mm)	3
70	Bolt, Button Head (M8 x 1.25 x 75mm)	2
46	Arc Washer (M8)	6
50	Acorn Nut (M8 x 1.25)	4
59 68	Washer (M8) Washer (M6)	11 8
60	Nylock Nut (M8 x 1.25)	2
71	Lock Washer (M8)	13

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to staminaproducts.com under the Customer Care section and order the part needed, e-mail us at customer.care@staminaproducts.com, or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.


Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.

STEP 1: Position the Wheels in the WHEEL CAPS(38) on the FRONT STABILIZER(3) facing the front. Attach the FRONT STABILIZER(3) to the front of the FRONT FRAME(1) with CARRIAGE BOLTS (M8x1.25x65mm)(49), ARC WASHERS(M8)(46), LOCK WASHERS(M8)(71), and ACORN NUTS(M8x1.25) (50).

STEP 2: Screw the STAND(75) to the bottom of the REAR FRAME(64). Connect the REAR FRAME(64) to the FRONT FRAME(1) with SOCKET HEAD BOLTS(M8x1.25x15mm)(69), LOCK WASHERS(M8)(71), and WASHERS(M8mm)(59).

STEP 3: Attach the REAR STABILIZER(6) to the back of the REAR FRAME(64) with CARRIAGE BOLTS(M8x1.25x65mm)(49), ARC WASHERS(M8)(46), LOCK WASHERS(M8)(71), and ACORN NUTS(M8x1.25)(50).

NOTE: You can adjust the **LEVELING CAPS(39)** on the **REAR STABILIZER(6)** to keep the Recumbent Bike stable.

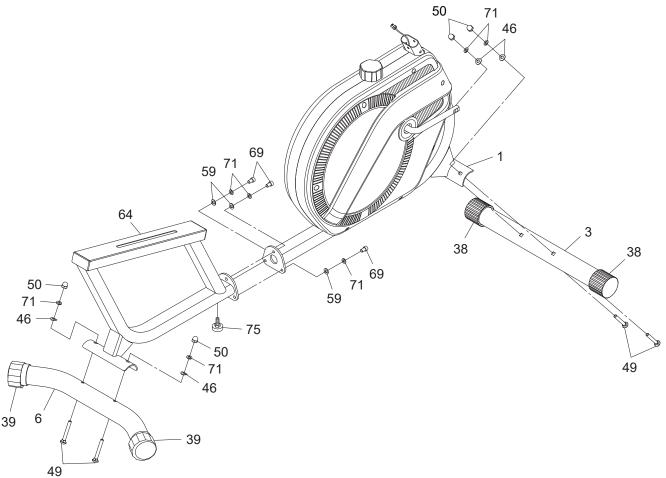

STEP 4


Attach the SEAT(37) to the SEAT FRAME(65) with ROUND HEAD BOLTS(M6x1x15mm)(48) and WASHERS(M6)(68).

STEP 5

There is an "**R**" decal on the **RIGHT HANDRAIL(5)**, and an "**L**" decal on the **LEFT HANDRAIL(4)**. Refer to the detail view **A**. Note the correct position of the **HANDRAILS(4, 5)**, the **HANDRAILS(4, 5)** should be assembled with angled upward. Attach the **LEFT** and **RIGHT HANDRAILS(4, 5)** to the **SEAT FRAME(65)** with **BUTTON HEAD BOLTS(M8x1.25x75mm)(70)**, **WASHERS(M8)(59)**, and **NYLOCK NUTS(M8x1.25)(60)**.

STEP 6

Attach the SEAT FRAME(65) to the REAR FRAME(64) with the SUPPORT BRACKET(73) and LOCKING KNOB(74). Attach the BACK CUSHION(32) to the SEAT FRAME(65) with ROUND HEAD BOLTS(M6x1x35mm)(67) and WASHERS(M6)(68).

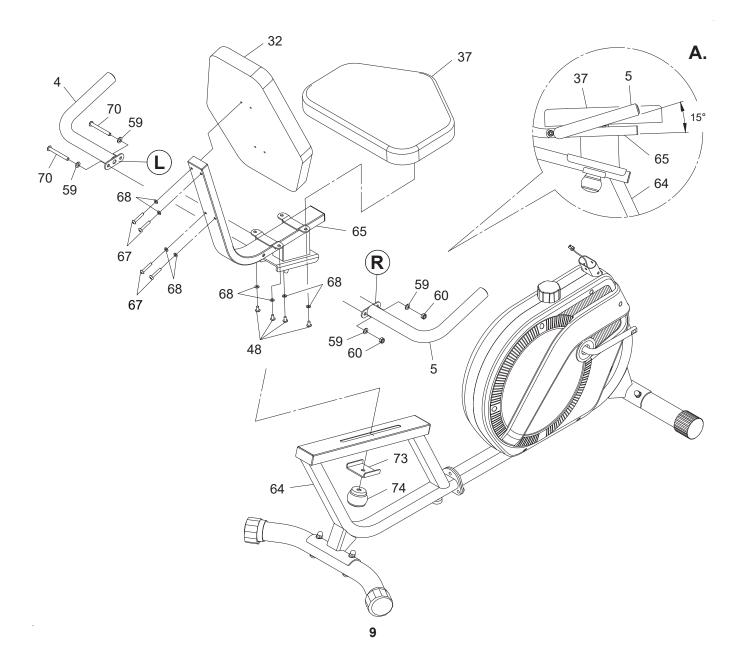


STEP 7

NOTE: The **RIGHT PEDAL(34)** has an **R** stamped on the end of the pedal shaft. The **RIGHT PEDAL(34)** has right hand threads and is tightened by turning clockwise. The **LEFT PEDAL(33)** has an **L** stamped on the end of the pedal shaft. The **LEFT PEDAL(33)** has left hand threads and is tightened by turning counterclockwise.

Thread the **RIGHT PEDAL(34)** into the right side of the **CRANK(13)** as shown. Tighten the pedal securely. The shoulder of the **PEDALS(33, 34)** should be in contact with the **CRANK(13)** when securely tightened. Select the **RIGHT PEDAL STRAP(36)** which has an **R** marked on it. Snap the three hole end to the inside edge of the **RIGHT PEDAL(34)**. Snap the other end of the strap to the hook on the outside edge of the **RIGHT PEDAL(34)**. Snap the other end of the strap to be easily removed from the pedals. Use the same procedure to attach the **LEFT PEDAL(33)** to the **CRANK(13)** and to attach the **LEFT PEDAL STRAP(35)** to the **LEFT PEDAL(33)**.

STEP 8

Connect the EXTENSION WIRE(8) to the SENSOR WIRE(9). Insert the UPRIGHT(2) onto the FRONT FRAME(1) and secure with BUTTON HEAD BOLTS(M8x1.25x15mm)(45), LOCK WASHERS(M8)(71), WASHERS(M8)(59), and ARC WASHERS(M8)(46).

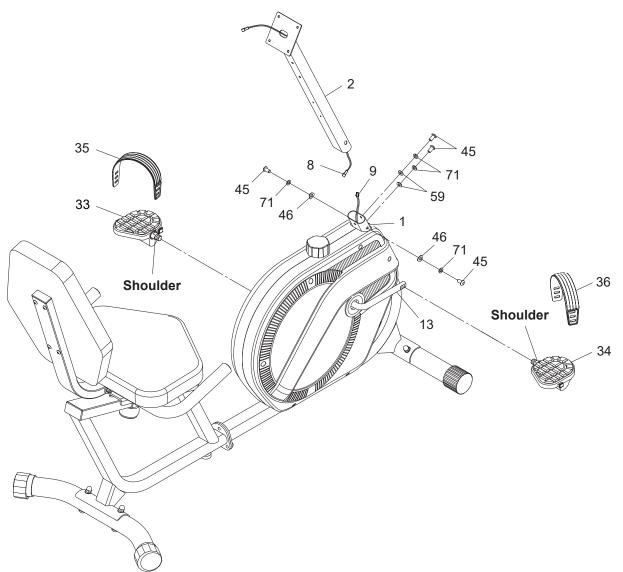

STEP 9

Attach the HANDLEBAR(66) to the UPRIGHT(2) with BUTTON HEAD BOLTS(M8x1.25x15mm)(45), LOCK WASHERS(M8)(71), and WASHERS(M8)(59).


STEP 10

Install two AAA batteries into the **METER(11)**, the batteries are not included. See page 15 for detailed battery installation instructions. Plug the **EXTENSION WIRE(8)** into the connecting wires of the **METER(11)**, and push the excess wires back into the **UPRIGHT(2)**. Attach the **METER(11)** to the plate on the **UPRIGHT(2)** with **ROUND HEAD SCREWS(M5x0.8x12mm)(63)**. Plug the **PULSE SENSOR WIRES(26)** into the back of the **METER(11)**.

NOTE: Be careful not to damage the wires when attaching the **METER(11)**.

STEP 11


Attach the WATER BOTTLE HOLDER(41) to the UPRIGHT(2) with WASHER HEAD SCREWS (M5x0.8x12mm)(53).

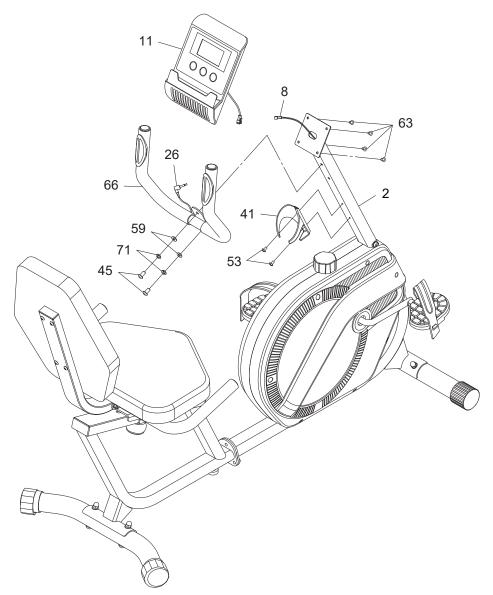

SET UP INSTRUCTIONS

Place the **Stamina® Recumbent Exercise Bike 348** in the area where it will be used. It is recommended that the **Stamina® Recumbent Exercise Bike 348** be placed on an equipment mat. The **Stamina® Recumbent Exercise Bike 348** is approximately 57.7 inches long (max.) x 21.1 inches wide x 42.3 inches tall. (These dimensions may vary up to one inch.) An area 4 feet wide x 7 feet long is required for safe operation of the **Stamina® Recumbent Exercise Bike 348**. Make sure that adequate space is available for access to and passage around the **Stamina® Recumbent Exercise Bike 348**.

- LEVELING: Adjust the LEVELING CAPS(39) on the REAR STABILIZER(6) so that the Stamina® Recumbent Exercise Bike 348 sits on the floor without rocking.
 - MOVING: The Stamina® Recumbent Exercise Bike 348 has a pair of Wheels in the WHEEL CAPS(38) on the FRONT STABILIZER(3). Lift up the REAR STABILIZER(6) to move the Stamina® Recumbent Exercise Bike 348.

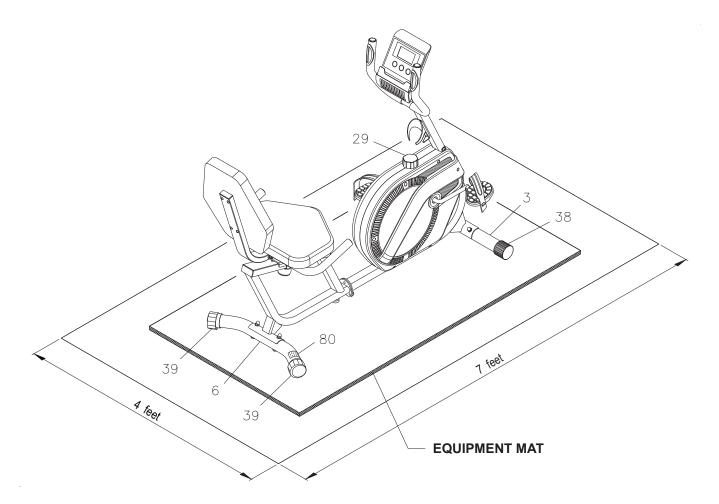

FUNCTION INSPECTION:

Visually inspect the **Stamina® Recumbent Exercise Bike 348** to verify that assembly is as shown in the above illustration. Check the function of the **Stamina® Recumbent Exercise Bike 348** by turning the crank slowly through one complete revolution to verify that the drive train functions properly. Adjust the **TENSION KNOB(29)** and verify that it functions properly and the resistance changes.

CAUTION: Locate and read the CAUTION LABEL(80) on the Stamina® Recumbent Exercise Bike 348. Make sure that all users read the CAUTION LABEL(80) before using the product.

OPERATIONAL INSTRUCTIONS


SEAT ADJUSTMENT

Proper seat adjustment is important. There is a slot in the **REAR FRAME(64)** to allow users to adjust the position of the seat for efficient exercise.

- Rotate the LOCKING KNOB(74) counterclockwise until the SEAT FRAME(65) can be moved. Slide the SEAT FRAME(65) to the desired position. Lock the SEAT FRAME(65) in position by rotating the LOCKING KNOB(74) clockwise to lock the SEAT FRAME(65) securely.
- 2. Sit on the seat and place your feet on the pedals. You should be able to move through a complete pedal stroke without locking your knees or shifting your hips on the seat. The seat is too close to the pedals if you have more than a slight bend in your knees at the bottom of the pedal stroke. The seat is too far from the pedals if you have to completely straighten your knees at the bottom of the pedal stroke.

CAUTION:

- 1. Do not attempt to adjust the seat while you are on the **Stamina® Recumbent Exercise Bike 348.**
- 2. Always tighten the LOCKING KNOB(74) after adjusting the seat to a new position.

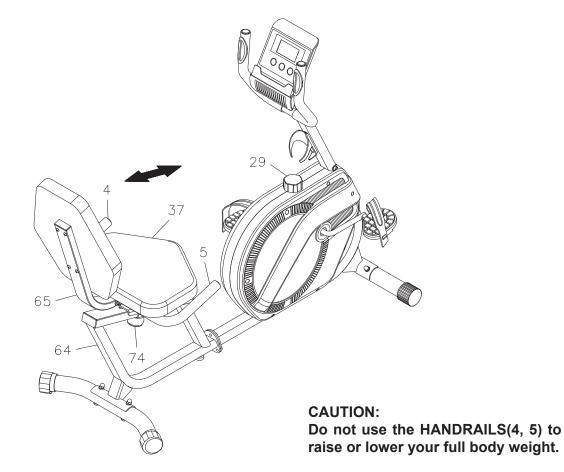

LOAD ADJUSTMENT

To increase the load, turn the **TENSION KNOB(29)** clockwise. To decrease the load, turn the **TENSION KNOB(29)** counterclockwise. There are eight levels for the load adjustment.

OPERATIONAL INSTRUCTIONS

USING THE FITNESS METER

POWER ON: Move the pedals or press any button. **POWER OFF:** Automatically shuts off after 4 minutes of inactivity.

FUNCTION BUTTONS:

- MODE : Press and release to select functions for display or to preset target values. Press the button and hold it down for two seconds to reset all functions to zero, except ODOMETER.
 - SET : In the STOP mode, press to set target values for TIME, DISTANCE, and CALORIES. Press the button and hold it down for two seconds, the meter will continue to add the values, release the button to stop.

RESET : In the **STOP** mode, press the button to reset the setting values to zero. Press the button and hold it down for two seconds to reset all functions to zero, except **ODOMETER.**

FUNCTIONS:

- SCAN TIME SPEED RESET MODE SET SET
- SCAN: Automatically scans TIME, SPEED, DISTANCE, CALORIES, ODOMETER, and PULSE in sequence with a change every six seconds. Press and release the MODE button until "SCAN" appears on display.
- TIME: Displays the time from 1 sec. up to 99:59 minutes. Counts down from preset value.
- **SPEED:** Displays the current speed from zero to 999.9 miles per hour.
- **DISTANCE:** Displays distance from zero to 999.9 Miles. Counts down from preset value.
- **ODOMETER:** Displays the total accumulated distance you have traveled from zero to 999.9 miles. The total accumulated distance is retained when the meter is turned off, until the batteries are removed.
- **CALORIES:** Displays the calories burned from zero to 999.9 Kcal. Counts down from preset value. The calorie readout is an estimate for an average user. It should be used only as a comparison between workouts on this unit.
 - **PULSE:** Displays your pulse rate in beats per minute. To display pulse, select the PULSE mode and grasp the pulse sensors on the handlebar, one in each hand. The heart symbol "♥ " will begin flashing when the meter senses your pulse. Your pulse will be displayed approximately five (5) seconds after the heart symbol is displayed. If the heart symbol does not appear, relax your grip or change your grip on the pulse sensors.

NOTE: The pulse function is a great tool to optimize your workout, but should be used as a reference only.

PRESET VALUES OPERATION:

You can begin pedaling to power on the meter and workout with the meter directly. Or, you can preset the function values for counting down. Press and release the **MODE** button until **"SCAN"** does not appear on display, the meter will enter setting mode. Use **SET** and **RESET** buttons to input the values, and press **MODE** button to confirm. Or, just press the **MODE** button to skip the setting and move on to the next function. After all the desired settings are chosen, begin pedaling to start the workout.

NOTE:

- 1. You may preset values for several functions. The preset function values will start to count down. When you complete one of the preset functions, the value of this completed function will start to count up, while the other preset functions will continue to count down.
- 2. The Meter will shut off automatically after 4 minutes of inactivity. All function values will be kept. You can continue to work out with these function values. Or, press the **RESET** or **MODE** button and hold it down for two seconds to reset all functions to zero, except **ODOMETER**. The **ODOMETER** will be reset to zero after batteries are removed for battery replacement or storage of the unit.

OPERATIONAL INSTRUCTIONS

HOW TO INSTALL AND REPLACE BATTERIES:

- 1. Open the Battery Door on the back of the meter.
- 2. The meter operates with two AAA batteries (1.5V each), the batteries are not included. Refer to the illustration to install or replace the batteries.
- **NOTE:** 1. Do not mix a new battery with an old battery.
 - 2. Use the same type of battery. Do not mix an alkaline battery with another type of battery.
 - 3. Rechargeable batteries are not recommended.
 - 4. Ultimate disposal of battery should be handled according to all state and federal laws and regulations.
 - 5. Do not dispose of batteries in fire.

AAA Batteries

Supported by

See insert for details

We do the thinking. You do the moving.

Music provided by **PiHeart**RADIO

müüv CONNECTION OPERATION

NOTE:

- 1. To fully operate your Stamina® Recumbent Exercise Bike 348 you will need to download the free müüv app.
- 2. You will need to enable bluetooth in your phone settings first.

Power on the Meter on your **Stamina® Recumbent Exercise Bike 348.** Open the **müüv app** and follow the following process to connect the Meter to the **müüv app.** It will make your **Stamina® Recumbent Exercise Bike 348** work with the **müüv** application and many others. For more details and information, go visit https://müüv.fit.

1 Tap on the Dashboard icon.	2 Tap on the Gear icon.	3 Tap on Connec Devices.	ted	4 Tap on Connect next to the "SERU-202101" to connect.
41 ¹ (2)	Kelcome back XXXXXX	•	Settings	< Connected Equipment & Devices
Hey XXXXXX,		Personal Info	>	Scanning For Compatible Devices
What do you want to do today?		Fitness Assessment	>	SERU-202101
<i>Ř</i> Ý Ť	0	My Equipment	>	
Cardio Strength Flexibility	③ 500 / MAY	Connected Dashboards & Apps	>	
		Connected Devices	>	
What equipment do you want to use? Upright Bike		Voice Controls	>	
Recumbent Bike		Bumping preferences	>	
		Support	>	
Elliptical/Strider		Terms of Service	>	
Rowing Machine		Privacy Policy	>	
Treadmill Create	Recent Activity +	ios 1.5.0 Build 12 - 0TA 5	- ∃ logout	Done
Bodyweight Only	Accentrativity			

NOTE: Under low battery conditions, the **METER(11)** may still work, but may make the **müüv app** unable to find the bluetooth device to connect. Please pay attention to the issue and replace the battery promptly.

STORAGE

- 1. To store the Stamina® Recumbent Exercise Bike 348, simply keep it in a clean dry place.
- 2. Adjust the **SEAT FRAME(65)** to the shortest position. The **Stamina® Recumbent Exercise Bike 348** is approximately 49.4 inches long x 21.1 inches wide x 42.3 inches tall. These dimensions will vary. Please measure your **Stamina® Recumbent Exercise Bike 348** if exact dimensions are needed.
- 3. To move the Stamina® Recumbent Exercise Bike 348, lift up the REAR STABILIZER(6) and use the Wheels on the FRONT STABILIZER(3).
- 4. To avoid damage to the electronics, remove the batteries before storing the **Stamina® Recumbent Exercise Bike 348** for one year or more.

MAINTENANCE

The safety and integrity designed into the **Stamina® Recumbent Exercise Bike 348** can only be maintained when the **Stamina® Recumbent Exercise Bike 348** is regularly examined for damage and wear. Special attention should be given to the following:

- 1. Adjust the **TENSION KNOB(29)** and verify that it functions properly and the resistance changes.
- 2. Use a wrench to verify that the pedals are tightened securely. If tightening is required, remember that the left pedal has left hand threads and is tightened by turning counterclockwise.
- 3. Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Tighten loose nuts and bolts.
- 4. Verify that the **CAUTION LABEL(80)** is in place and easy to read. Call Stamina Products immediately at **1-800-375-7520** for a replacement **CAUTION LABEL(80)** if it is missing or damaged.
- 5. It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
- 6. Worn or damaged components must be replaced immediately or the **Stamina® Recumbent Exercise Bike 348** removed from service until repair is made.
- 7. Only Stamina Products supplied components should be used to maintain/repair the **Stamina® Recumbent Exercise Bike 348.**
- 8. Keep your **Stamina® Recumbent Exercise Bike 348** clean by wiping it off with an absorbent cloth after use.

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

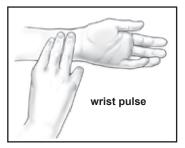

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%	
20 years	110-180 beats per minute	200 beats per minute	
25 years	107-175 beats per minute	195 beats per minute	
30 years	105-171 beats per minute	190 beats per minute	
35 years	102-166 beats per minute	185 beats per minute	
40 years	99-162 beats per minute	180 beats per minute	
45 years	97-157 beats per minute	175 beats per minute	
50 years	94-153 beats per minute	170 beats per minute	
55 years	91-148 beats per minute	165 beats per minute	
60 years	88-144 beats per minute	160 beats per minute	
65 years	85-139 beats per minute	155 beats per minute	
70 years	83-135 beats per minute	150 beats per minute	

Target Heart Rate Zone Estimated by Age*


* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: 220 - Age = predicted maximum heart rate

WARM-UP and COOL-DOWN


Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

Stretching Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

Suggested Stretching Exercises

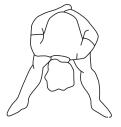

Lower Body Stretch Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs. DO NOT BOUNCE! When the pull on the back of the legs lessens, gradually try a lower position.

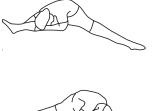

Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds. DO NOT BOUNCE! Do this stretch 10 times. Repeat the stretch with the left leg.





Bent Torso Pulls While sitting on the floor, have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.



Bent Over Leg Stretch

Stand with feet shoulderwidth apart and lean forward as illustrated. Using the arms, **gently** pull the upper body towards the right leg. Let the head hang down. DO NOT BOUNCE! Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

Remember to always check with your physician before starting any exercise program.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA. Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 2040 N Alliance Ave, Springfield, Missouri, USA, MO 65803, or email us at customer.care@staminaproducts.com, or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.


NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER. These warranties are not transferable. IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY. If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

PRODUCT PARTS DRAWING

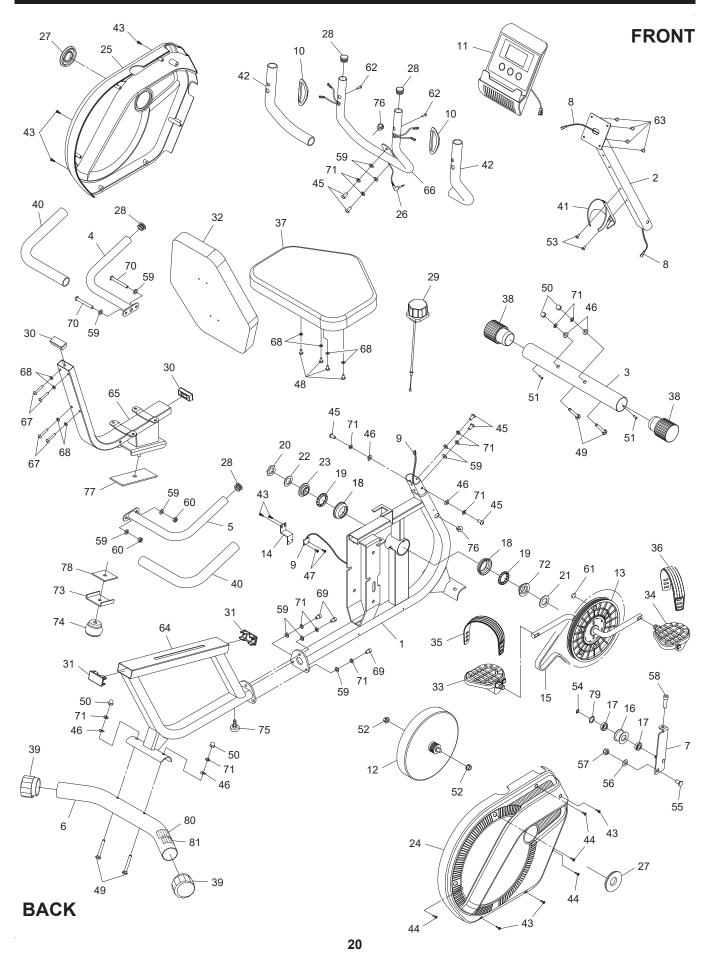

PARTS LIST

PART#	PART NAME	QTY
1	Front Frame	1
2	Upright	1
3	Front Stabilizer	1
4	Left Handrail	1
5	Right Handrail	1
6	Rear Stabilizer	1
7	Idler Arm	1
8	Extension Wire	1
9	Sensor Wire	1
10	Pulse Sensor Plate	2
11	Meter	1
12	Magnetic Unit	1
13	Crank w/ Pulley	1
14	Sensor Bracket	1
15	V-Ribbed Belt (320-J5)	1
16	Idler Wheel	1
17	Bearing (6000zz)	2
18	Bearing Housing	2
19	Ball Bearing	2
20	Bearing Nut	1
21	Bearing Washer	1
22	Bearing Snap Washer	1
23	Outside Bearing Collar	1
24	Right Cover	1
25	Left Cover	1
26	Pulse Plug Wire	1
27	Crank Cap	2
28	Round Plug (25mm)	4
29	Tension Knob	1
30	Rectangular Plug (23.5mm x 53.5mm)	2
31	Rectangular Plug (30mm x 60mm)	2
32	Back Cushion	1
33	Left Pedal	1
34	Right Pedal	1
35	Left Pedal Strap	1
36	Right Pedal Strap	1
37	Seat	1
38	Wheel Cap	2
39	Leveling Cap	2
40	Handrail Foam Tube	2
41	Water Bottle Holder	1
42	Handlebar Foam Tube	2
43	Screw, Round Head Self-Drilling (ST4.2 x 16mm)	8
44	Screw, Round Head (ST4.2 x 16mm)	4
44 45	Bolt, Button Head (M8 x 1.25 x 15mm)	4 6
45	Arc Washer (M8)	6
40	Screw, Washer Head Self-Drilling (ST3.5 x 16mm)	2
וד		2

PARTS LIST

PART#	PART NAME	QTY
48	Bolt, Round Head (M6 x 1.0 x 15mm)	4
49	Carriage Bolt (M8 x 1.25 x 65mm)	4
50	Acorn Nut (M8 x 1.25)	4
51	Screw, Round Head (ST4.2 x 20mm)	2
52	Flange Nut (M10 x 1.0)	2
53	Screw, Washer Head (M5 x 0.8 x 12mm)	2
54	C Ring (ø10mm)	1
55	Carriage Bolt (M10 x 1.5 x 20mm)	1
56	Washer (M10)	1
57	Nylock Nut (M10 x 1.5)	1
58	Bolt, Socket Head (M10 x 1.5 x 35mm)	1
59	Washer (M8)	11
60	Nylock Nut (M8 x 1.25)	2
61	Magnet	1
62	Screw, Flat Head (ST4.2 x 20mm)	2
63	Screw, Round Head (M5 x 0.8 x 12mm)	4
64	Rear Frame	1
65	Seat Frame	1
66	Handlebar	1
67	Bolt, Round Head (M6 x 1.0 x 35mm)	4
68	Washer (M6)	8
69	Bolt, Socket Head (M8 x 1.25 x 15mm)	3
70	Bolt, Button Head (M8 x 1.25 x 75mm)	2
71	Lock Washer (M8)	13
72	Inside Bearing Collar	1
73	Support Bracket	1
74	Locking Knob	1
75	Stand	1
76	Grommet Plug	2
77	Larger Non-Skid Pad	1
78	Small Non-Skid Pad	1
79	Wave Washer (S10)	1
80	Caution Label	1
81	Serial Decal	1
82	Allen Wrench (6mm)	1
83	Allen Wrench (5mm)	1
84	Combination Wrench	1
85	Manual	1

TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at customer.care@staminaproducts. com or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



233 TELEPHONE CUSTOMER CARE Tel: 1 (800) 375-7520





STAMINA PRODUCTS, INC. ATTN: Customer Car 2040 N Alliance Ave, Springfield, MO 65803

Would you like to recieve email information or special offers from Stamina Products? Register at contact.staminaproducts.com

TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to register.staminaproducts.com. Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 2040 N Alliance Ave, Springfield, MO 65803.

PRODUCT REGISTRATION FORM	Stamina Produ 2040 N Alliance Ave, Spri		803
Model Number:		Serial Number:	:
Product Name:			
Place Purchased:			
Date of Purchase:		Purchase Price	e:
First Name:		Last Name:	
City:	State:		Zip Code:
Email Address:		Phone #: ()
Would you like to receive email information or special	offers from Stamina Products	?*Yes	No *If yes, be sure your email address is included above.
÷	Detach and Mail or Fax	the Form Abov	ve 🖗

TO ORDER PARTS

If there are missing or damaged parts, you can go to parts.staminaproducts.com and order those parts. If you have questions, please contact customer care. Do not return the product. To order parts by mail, fill out the sheet below and fax it to 417-889-8064. The part will be mailed to your address.

	Detach and Mail or Fax the Form Below	<u>%</u>			
PARTS ORDER FORM Stamina Products, Inc. 2040 N Alliance Ave, Springfield, MO 65803					
Mr./Ms:					
Address:					
City:		9:			
IMPORTAL	NT : We require your phone number to process the order!				
Phone #: ()					
Date of Purchase:					
Model #:					
Purchased From:					
IMPC	ORTANT: Before filling out the portion below, make sure you have the correct informat Refer to the parts list to make sure you're ordering the right parts!	tion.			
PART #	DESCRIPTION	QUANTITY			
EXAMPLE: 1	Rear Unit Assembly	1			