


STAMINA | X

4-IN-1 STRENGTH TRAINING SYSTEM

Owner's Manual

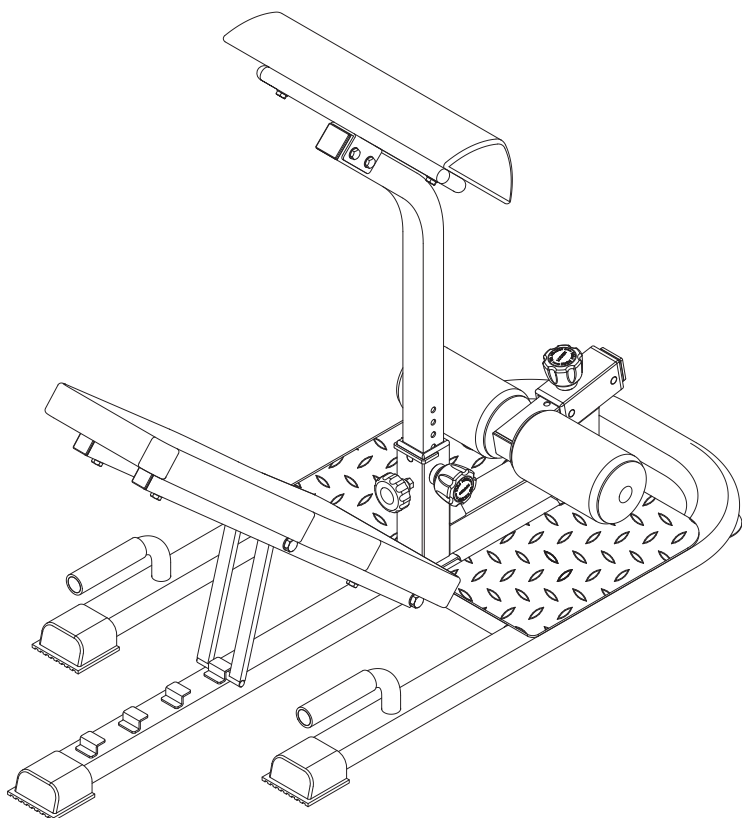

Product May Vary Slightly From Pictured.

CAUTION:

Weight on this product should not exceed 250 lbs.

⚠ WARNING

Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are securely tightened prior to each use. Follow all safety instructions in this manual.

When calling for parts or service, please specify the following numbers:

Model#: 20-3011

S/N: _____

This Product is Distributed Exclusively by



2040 N Alliance Ave, Springfield, MO 65803

Customer Care

1 (800) 375-7520

www.staminaproducts.com

STAMINA PRODUCTS
MADE IN CHINA

© 2019 Stamina Products, Inc.
2019, 04

TABLE OF CONTENTS

| | | | |
|--|----|-------------------------------|----|
| Safety Instructions | 2 | Conditioning Guidelines | 12 |
| Before You Begin | 4 | Warm-Up and Cool-Down | 13 |
| Equipment Warning, Caution & Notice Labels ... | 5 | Product Parts Drawing | 14 |
| Hardware Identification Chart | 6 | Parts List | 15 |
| Assembly Instructions | 7 | Warranty | 16 |
| Storage | 11 | Notes | 17 |
| Maintenance | 11 | Fax/Mail Ordering Form | 18 |

SAFETY INSTRUCTIONS

⚠ WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

⚠ WARNING Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

⚠ WARNING To reduce the risk of serious injury, read the following Safety Instructions before using the **STAMINA | X 4-IN-1 Strength Training System**.

1. Save these instructions and ensure that other exercisers read this manual prior to using the **STAMINA | X 4-IN-1 Strength Training System** for the first time.
2. Read all warnings and cautions posted on the **STAMINA | X 4-IN-1 Strength Training System**.
3. The **STAMINA | X 4-IN-1 Strength Training System** should only be used after a thorough review of the Owner's Manual. Make sure that it is properly assembled and tightened before use.
4. We recommend that two people be available for assembly of this product.
5. Keep children away from the **STAMINA | X 4-IN-1 Strength Training System**. Do not allow children to use or play on the **STAMINA | X 4-IN-1 Strength Training System**. Keep children and pets away from the **STAMINA | X 4-IN-1 Strength Training System** at all times.
6. It is recommended that you place this product on an equipment mat.
7. Set up and operate the **STAMINA | X 4-IN-1 Strength Training System** on a solid level surface. Do not position the **STAMINA | X 4-IN-1 Strength Training System** on loose rugs or uneven surfaces.
8. Make sure that adequate space is available for access to and around the **STAMINA | X 4-IN-1 Strength Training System**.
9. Before using, inspect the **STAMINA | X 4-IN-1 Strength Training System** for worn or loose components, and securely tighten or replace any worn or loose components prior to use.
10. Before using, always check the Back Cushion(10) to be sure it is secure. The Foam Pads(20) are securely tightened by ADJUSTMENT KNOB(15). Squat Cushion(11) or the Hyper Extension Pad(12) is securely tightened by ADJUSTMENT KNOB(15) and Securing Knob(35). And the pin of the Adjustment Knobs(15) must be inserted into one of the desired adjustment holes.
11. Consult your physician before using this product. If you feel faint, dizzy, or experience pain during use, stop immediately and consult with your physician.
12. Choose the intensity that fits your strength and flexibility level. Know your body's limits and use this product within them. Use common sense when using this product.
13. Do not wear loose or dangling clothing while using the **STAMINA | X 4-IN-1 Strength Training System**.
14. Never exercise in bare feet or socks; always wear proper footwear such as running, walking, or cross training shoes that fit well, provide foot support, and feature non-skid rubber soles.
15. Be careful to maintain your balance while using, mounting, dismounting, or assembling the **STAMINA | X 4-IN-1 Strength Training System**, loss of balance may result in a fall and serious bodily injury.
16. The **STAMINA | X 4-IN-1 Strength Training System** should not be used by persons weighing over 250 pounds.
17. The **STAMINA | X 4-IN-1 Strength Training System** should be used by only one person at a time.
18. The **STAMINA | X 4-IN-1 Strength Training System** is for consumer use only. It is not for use in public or semipublic facilities.

EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE. REGISTER YOUR PRODUCT.



**NEED HELP?
CONTACT US FIRST
1 (800) 375-7520
customer.care@staminaproducts.com**

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

With your body in mind,
Stamina Customer Care

To enact your extended warranty and to help us better serve you, please go online and register your new product.

register.staminaproducts.com

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



ONLINE

customer.care@staminaproducts.com
www.staminaproducts.com



TELEPHONE

1 (800) 375-7520



FAX

(417) 889-8064



MAIL

Stamina Products, Inc.
ATTN: Customer Care
2040 N Alliance Ave
Springfield, MO 65803



facebook.com/StaminaProducts
facebook.com/AeroPilates

CUSTOMER CARE HOURS:

Monday-Thursday, 7:30 AM-5:00 PM, Central Time
Friday, 8:00 AM-3:00 PM, Central Time

BEFORE YOU BEGIN

Thank you for choosing the **STAMINA | X 4-IN-1 Strength Training System**. We take great pride in producing this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The **STAMINA | X 4-IN-1 Strength Training System** provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See page 5 for an image of the serial decal. Model number and serial number are required when


calling for assistance.

Read this manual carefully before using the **STAMINA | X 4-IN-1 Strength Training System**.


Although Stamina constructs its products with the finest materials and uses the highest standards of manufacturing and quality control, there can sometimes be missing parts or incorrectly sized parts. If you have any questions or problems with the parts included with your **STAMINA | X 4-IN-1 Strength Training System**, please do not return the product. Contact us FIRST!

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on staminaproducts.com. Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

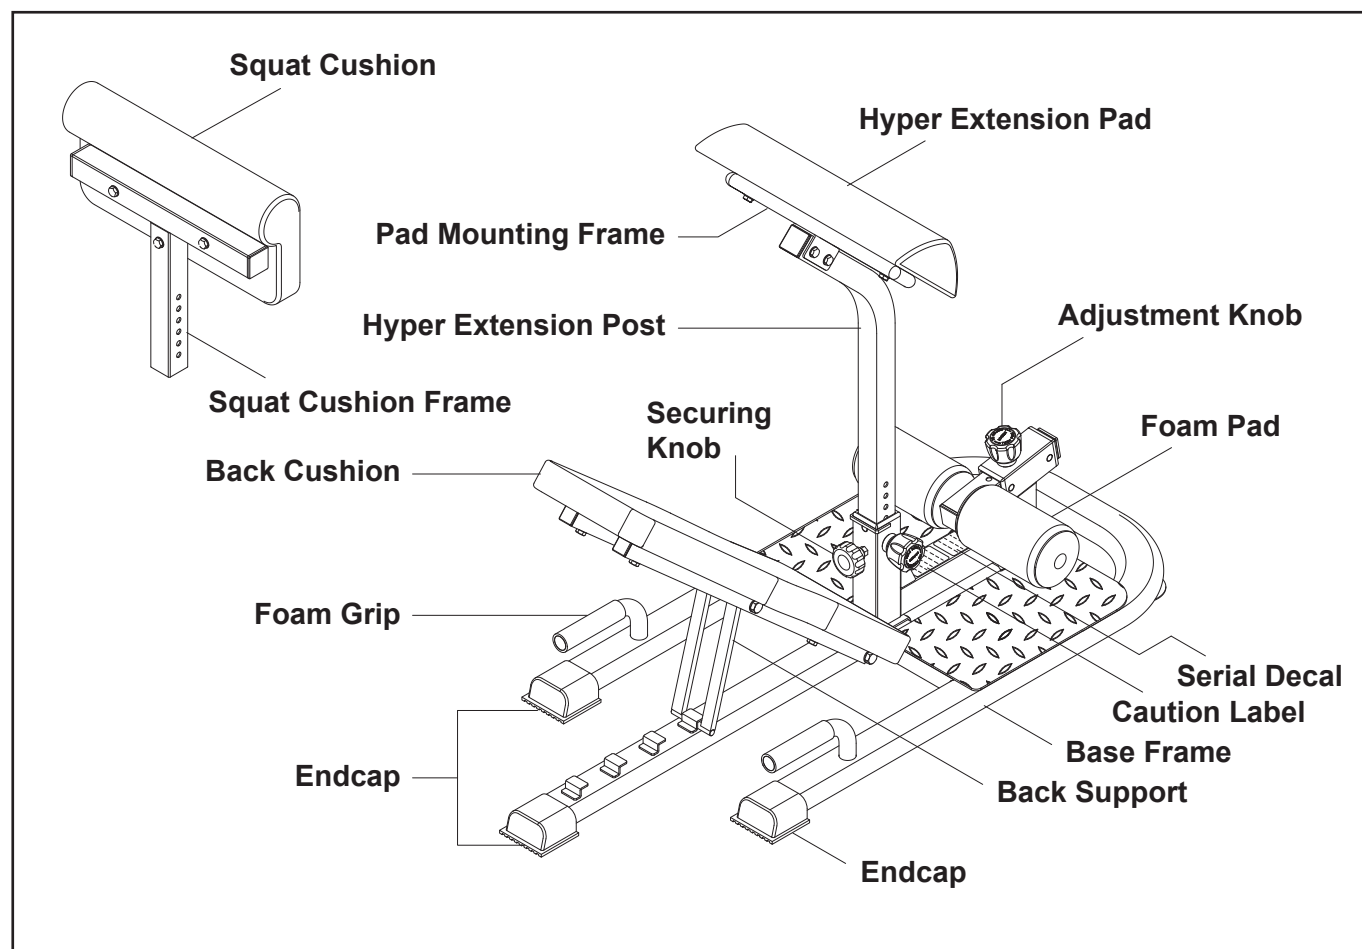

THE FOLLOWING TOOLS ARE INCLUDED FOR ASSEMBLY:



Wrench (2 Pieces)

EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the **STAMINA | X 4-IN-1 Strength Training System**. Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

CAUTION LABEL(36)




SERIAL DECAL(37)



To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.





HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the fasteners used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

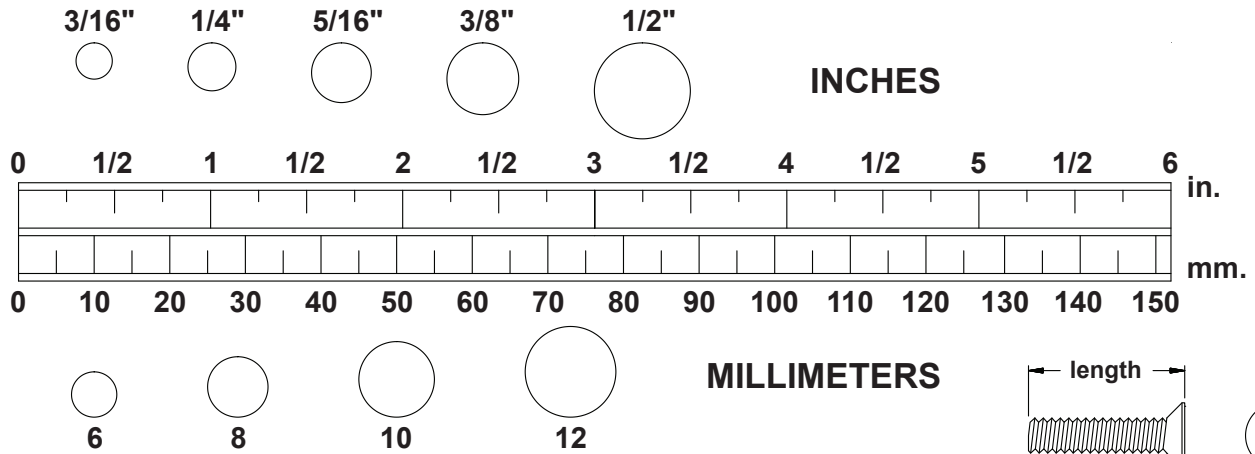

NOTICE: The length of all bolts and screws, except those with flat heads, is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.

After unpacking the unit, open the hardware bag and make sure that you have all the following fasteners. Some fasteners may be already attached to the parts.

| | Part Number and Description | | Qty |
|---|-----------------------------|------------------------------------|-----|
|  | 26 | Bolt, Hex Head (M10 x 1.5 x 150mm) | 2 |
| | 27 | Bolt, Hex Head (M10 x 1.5 x 90mm) | 1 |
| | 28 | Bolt, Hex Head (M10 x 1.5 x 80mm) | 4 |
|  | 29 | Bolt, Hex Head (M8 x 1.25 x 55mm) | 5 |
| | 30 | Bolt, Hex Head (M8 x 1.25 x 35mm) | 6 |
|  | 31 | Washer (M10) | 14 |
| | 32 | Washer (M8) | 13 |
|  | 33 | Nylock Nut (M10 x 1.5) | 7 |
| | 34 | Nylock Nut (M8 x 1.25) | 2 |


ASSEMBLY INSTRUCTIONS

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to staminaproducts.com under the Customer Care section and order the part needed, e-mail us at customer.care@staminaproducts.com, or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.

STEP 1

Attach the **MAIN FRAME(3)** to the **BASE FRAME(1)** with **HEX BOLTS(M10x1.5x80mm)(28)**, **WASHERS(M10)(31)**, and **NYLOCK NUTS(M10x1.5)(33)**.

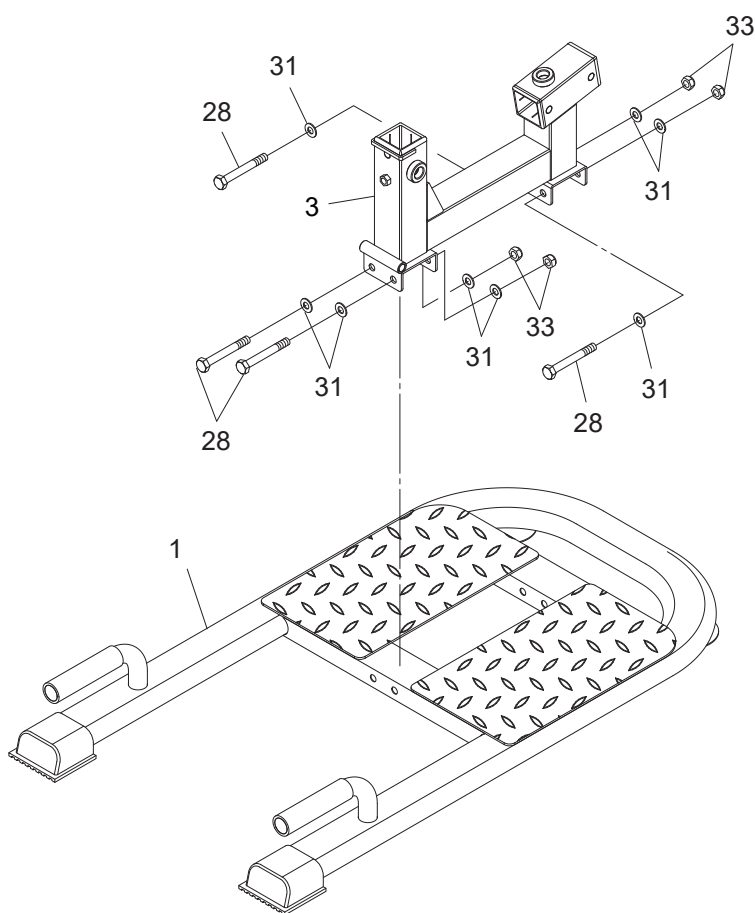

ASSEMBLY INSTRUCTIONS


STEP 2

Attach the **EXTENSION BASE(2)** to the **BASE FRAME(1)** with **HEX BOLT(M10x1.5x90mm)(27)**, **WASHERS(M10)(31)**, and **NYLOCK NUT(M10x1.5)(33)**.

STEP 3

Refer to the inset drawing. Use a slight angle to insert the **FOAM PAD POST(4)** into the **MAIN FRAME(3)** and secure with the **ADJUSTMENT KNOB(15)**.

NOTE: The pin of the **ADJUSTMENT KNOB(15)** must be inserted into one of the adjustment holes in the **FOAM PAD POST(4)** and the **ADJUSTMENT KNOB(15)** must be screwed in tight to ensure that the **FOAM PAD POST(4)** will fit securely in the **MAIN FRAME(3)**.

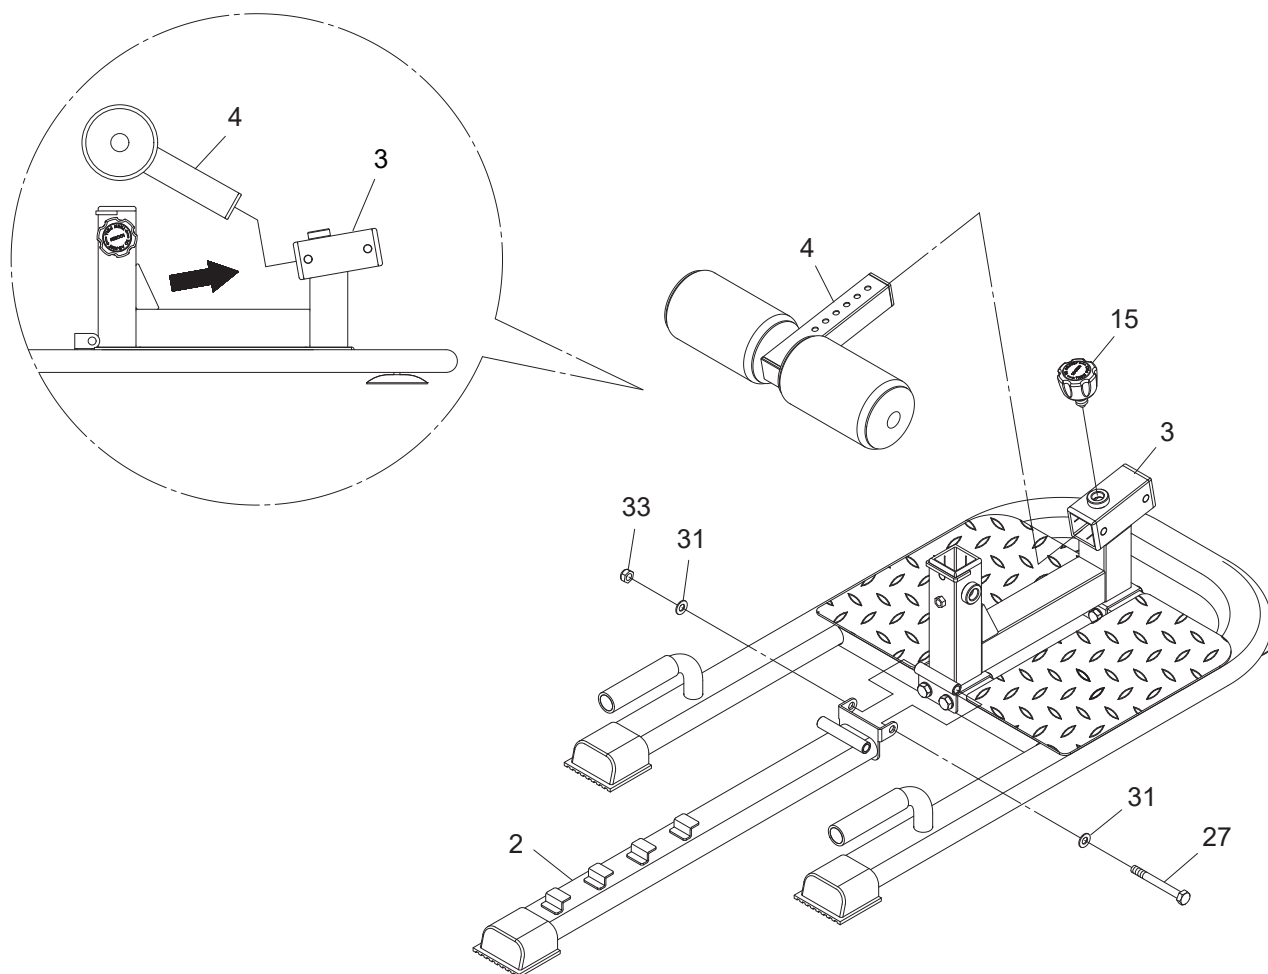

ASSEMBLY INSTRUCTIONS

STEP 4

Attach the two **CUSHION BRACES(6)** to the **EXTENSION BASE(2)** with **HEX BOLT(M10x1.5x150mm)(26)**, **WASHERS(M10)(31)**, and **NYLOCK NUT(M10x1.5)(33)**.

NOTE: Tighten until snug, the **CUSHION BRACES(6)** must be allowed to pivot.

STEP 5


Slide the **BACK SUPPORT(5)** between the **CUSHION BRACES(6)** and secure with **HEX BOLT(M10x1.5x150mm)(26)**, **WASHERS(M10)(31)**, and **NYLOCK NUT(M10x1.5)(33)**.

NOTE: Tighten until snug, the **BACK SUPPORT(5)** must be allowed to pivot.

STEP 6

Attach the **BACK CUSHION(10)** to the **CUSHION BRACES(6)** with **HEX BOLTS(M8x1.25x35mm)(30)** and **WASHERS(M8)(32)**.

NOTE: The **BACK CUSHION(10)** can be adjusted to different incline positions. To position the **BACK CUSHION(10)** to desired elevation, simply put the **BACK SUPPORT(5)** into one of the holders on the **EXTENSION BASE(2)**.

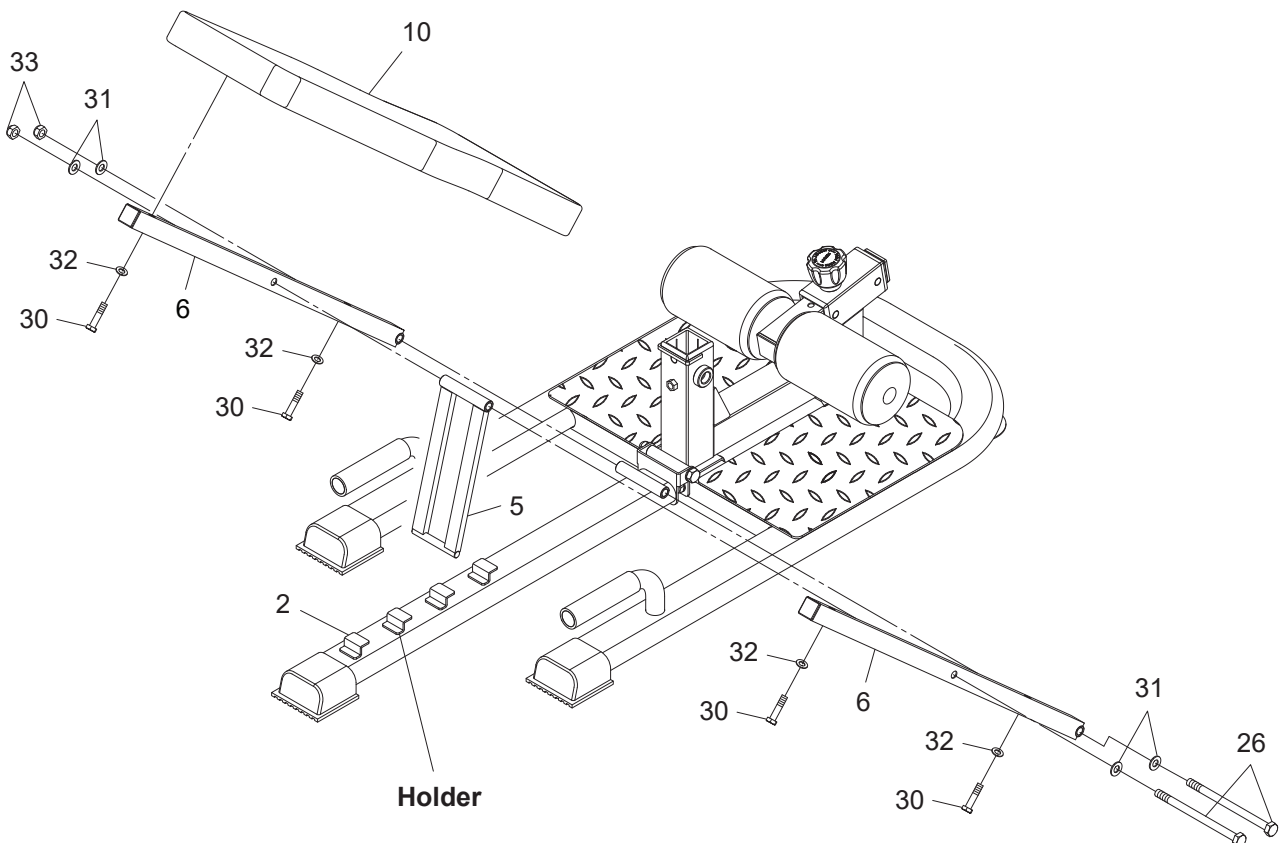

ASSEMBLY INSTRUCTIONS



STEP 7

Refer to the inset drawing. Attach the **PAD MOUNTING FRAME(8)** to the **HYPER EXTENSION POST(7)** with **HEX BOLTS(M8x1.25x55mm)(29)**, **WASHERS(M8)(32)**, and **NYLOCK NUTS(M8x1.25)(34)**. Attach the **HYPER EXTENSION PAD(12)** to the **PAD MOUNTING FRAME(8)** with **HEX BOLTS(M8x1.25x35mm)(30)** and **WASHERS(M8)(32)**.

STEP 8

Refer to the illustration below. Attach the **SQUAT CUSHION(11)** to the **SQUAT CUSHION FRAME(9)** with **HEX BOLTS(M8x1.25x55mm)(29)** and **WASHERS(M8)(32)**. Insert the **SQUAT CUSHION FRAME(9)** into the **MAIN FRAME(3)** and lock it in place with the **ADJUSTMENT KNOB(15)** and **SECURING KNOB(35)**. The pin of the **ADJUSTMENT KNOB(15)** must be inserted into one of the adjustment holes in the **SQUAT CUSHION FRAME(9)** and the **ADJUSTMENT KNOB(15)** and **SECURING KNOB(35)** must be screwed in tight to ensure that the **SQUAT CUSHION FRAME(9)** will fit securely in the **MAIN FRAME(3)**.

NOTE: You can choose to install the **HYPER EXTENSION PAD(12)** to the **MAIN FRAME(3)**, loosen but do not remove the **SECURING KNOB(35)**. Loosen and pull the **ADJUSTMENT KNOB(15)**, then insert the **HYPER EXTENSION POST(7)** into the **MAIN FRAME(3)** and secure with the **ADJUSTMENT KNOB(15)**. Tighten the **ADJUSTMENT KNOB(15)** and **SECURING KNOB(35)**.

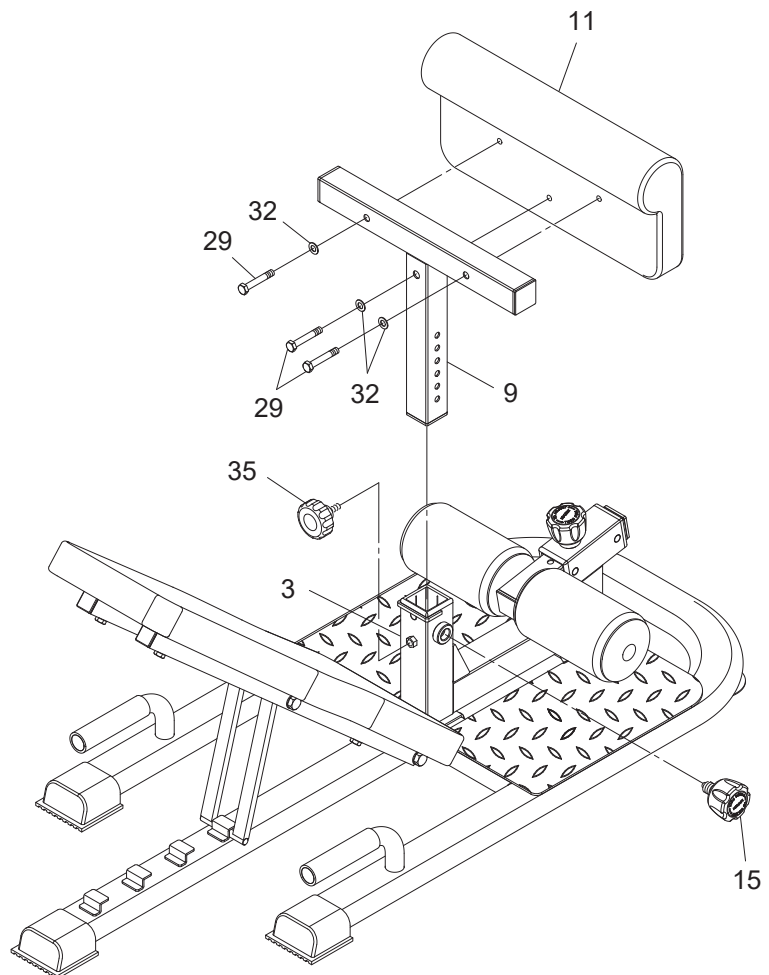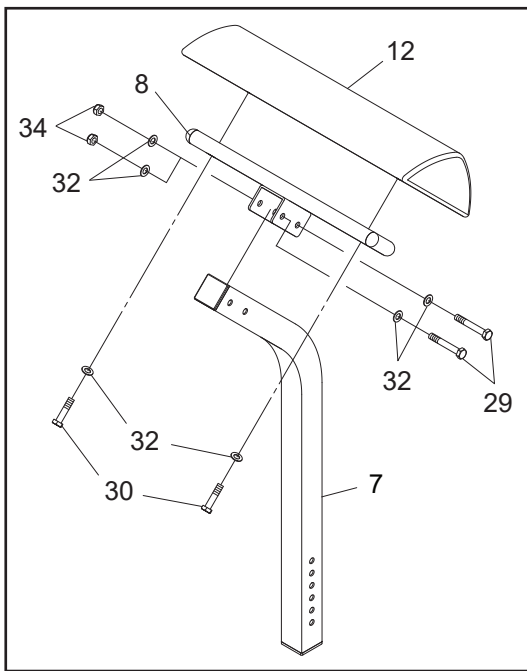

STORAGE

1. To store the **STAMINA | X 4-IN-1 Strength Training System**, simply keep it in a clean dry place.
2. Use two people to lift from the **Base Frame(1)** to move the **STAMINA | X 4-IN-1 Strength Training System**.

MAINTENANCE

The safety and integrity designed into the **STAMINA | X 4-IN-1 Strength Training System** can only be maintained when the **STAMINA | X 4-IN-1 Strength Training System** is regularly examined for damage and wear. Special attention should be given to the following:

1. Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Tighten loose nuts and bolts.
2. Verify that the **CAUTION LABEL(36)** is in place and easy to read. Call Stamina Products immediately at **1-800-375-7520** for a replacement **CAUTION LABEL(36)** if it is missing or damaged.
3. It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
4. Worn or damaged components must be replaced immediately or the **STAMINA | X 4-IN-1 Strength Training System** removed from service until repair is made.
5. Only Stamina Products supplied components should be used to maintain/repair the **STAMINA | X 4-IN-1 Strength Training System**.
6. Keep your **STAMINA | X 4-IN-1 Strength Training System** clean by wiping it off with an absorbent cloth after use.

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

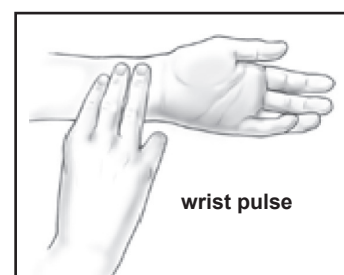

Target Heart Rate Zone Estimated by Age*

| Age | Target Heart Rate Zone (55%-90% of Maximum Heart Rate) | Average Maximum Heart Rate 100% |
|----------|---|------------------------------------|
| 20 years | 110-180 beats per minute | 200 beats per minute |
| 25 years | 107-175 beats per minute | 195 beats per minute |
| 30 years | 105-171 beats per minute | 190 beats per minute |
| 35 years | 102-166 beats per minute | 185 beats per minute |
| 40 years | 99-162 beats per minute | 180 beats per minute |
| 45 years | 97-157 beats per minute | 175 beats per minute |
| 50 years | 94-153 beats per minute | 170 beats per minute |
| 55 years | 91-148 beats per minute | 165 beats per minute |
| 60 years | 88-144 beats per minute | 160 beats per minute |
| 65 years | 85-139 beats per minute | 155 beats per minute |
| 70 years | 83-135 beats per minute | 150 beats per minute |


* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: $220 - \text{Age} = \text{predicted maximum heart rate}$

WARM-UP and COOL-DOWN

Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

Stretching Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

Suggested Stretching Exercises

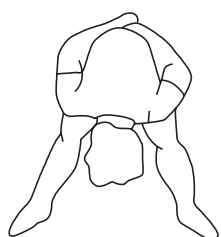

Lower Body Stretch

Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs.

DO NOT BOUNCE!

When the pull on the back of the legs lessens, gradually try a lower position.





Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds.


DO NOT BOUNCE!

Do this stretch 10 times. Repeat the stretch with the left leg.

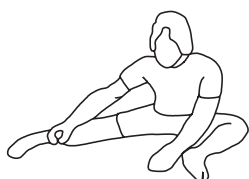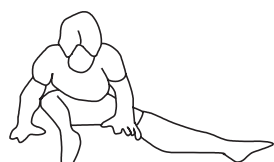

Bent Torso Pulls

While sitting on the floor, have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.

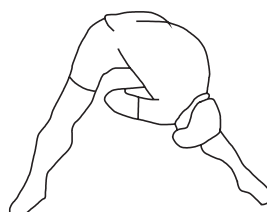

Bent Over Leg Stretch

Stand with feet shoulder-width apart and lean forward as illustrated. Using the arms, **gently** pull the upper body towards the right leg. Let the head hang down.

DO NOT BOUNCE!


Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

Remember to always check with your physician before starting any exercise program.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

PRODUCT PARTS DRAWING

FRONT

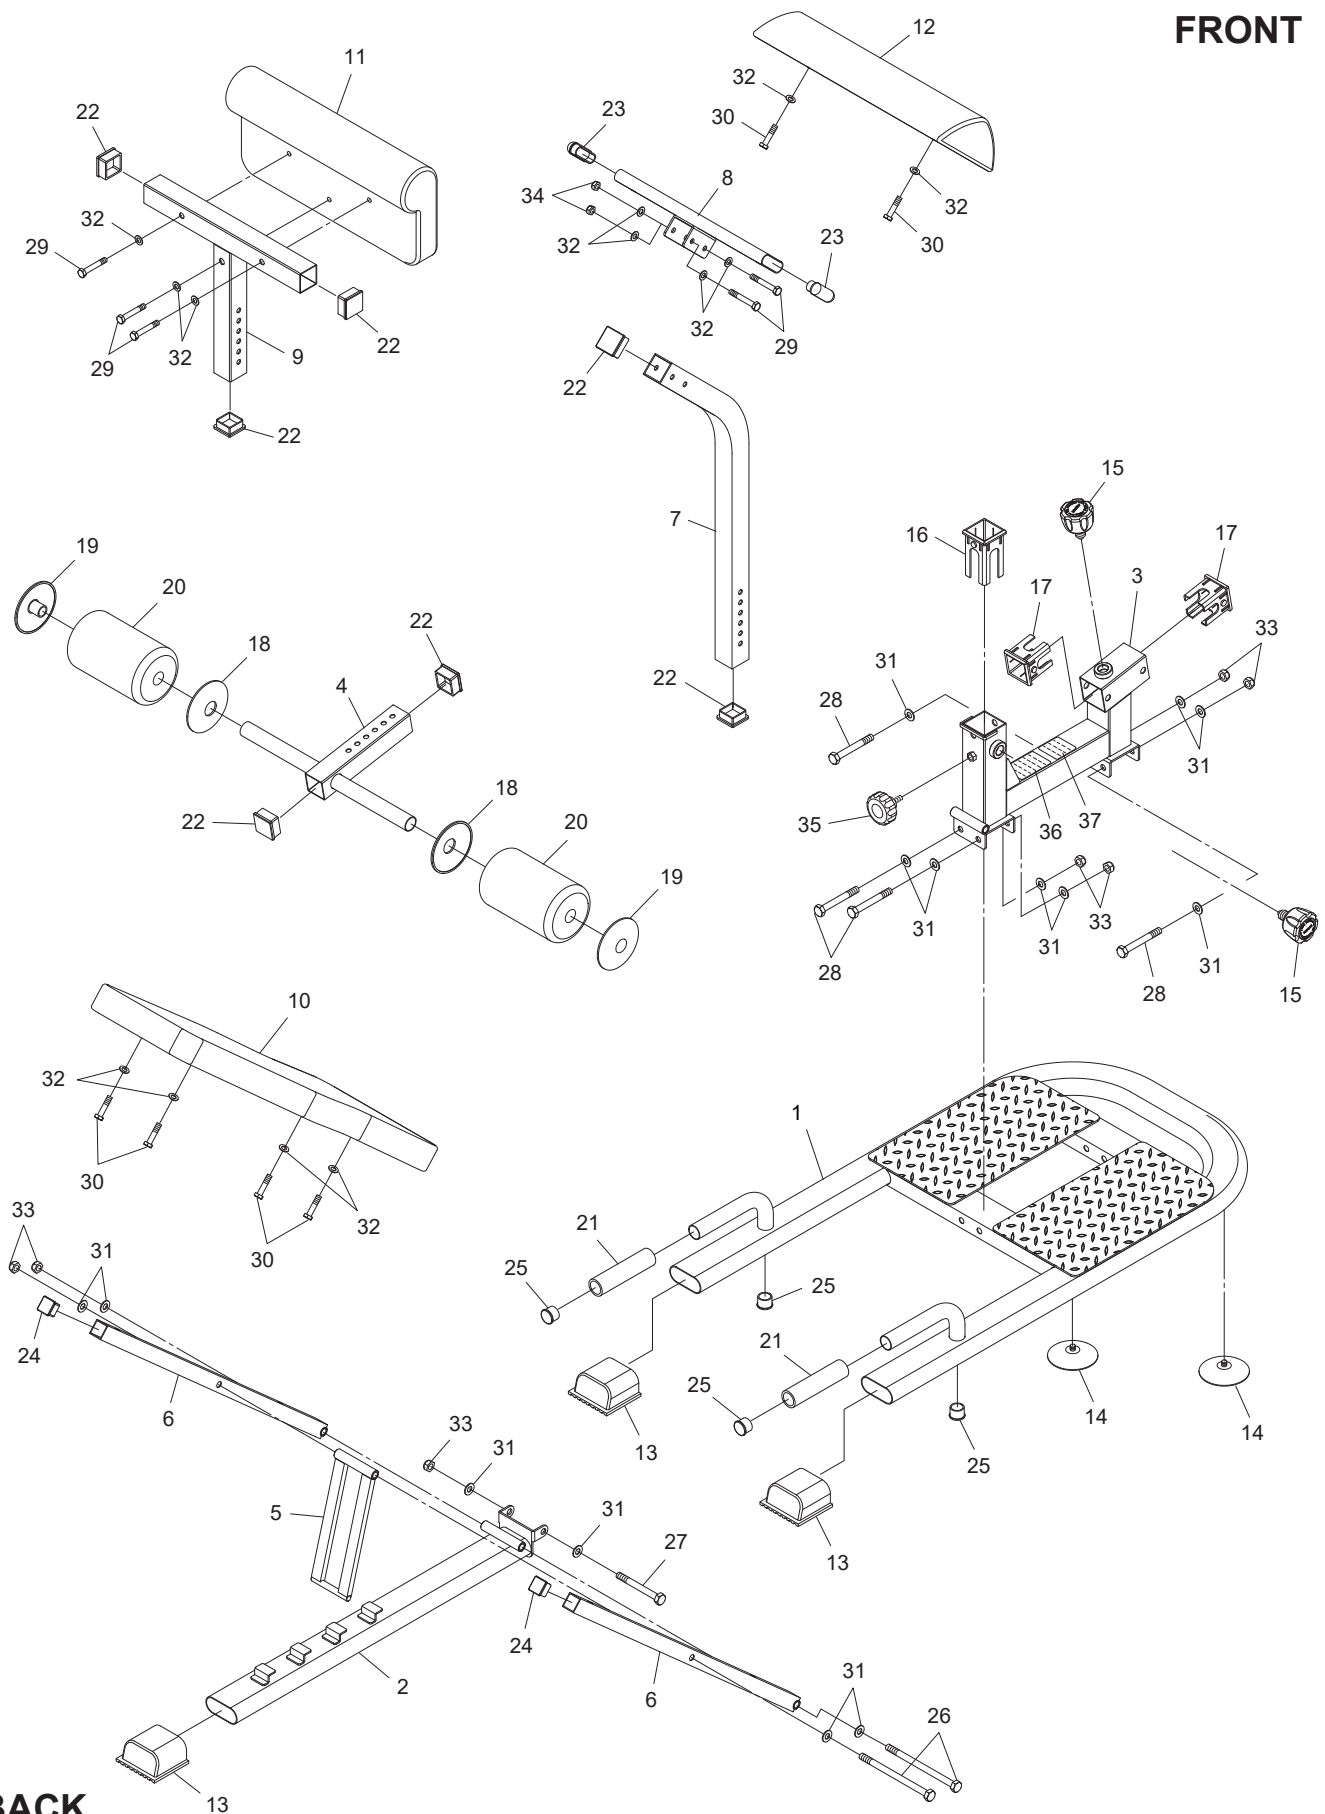

BACK

PARTS LIST

| PART# | PART NAME | QTY |
|-------|------------------------------------|-----|
| 1 | Base Frame | 1 |
| 2 | Extension Base | 1 |
| 3 | Main Frame | 1 |
| 4 | Foam Pad Post | 1 |
| 5 | Back Support | 1 |
| 6 | Cushion Brace | 2 |
| 7 | Hyper Extension Post | 1 |
| 8 | Pad Mounting Frame | 1 |
| 9 | Squat Cushion Frame | 1 |
| 10 | Back Cushion | 1 |
| 11 | Squat Cushion | 1 |
| 12 | Hyper Extension Pad | 1 |
| 13 | Endcap | 3 |
| 14 | Stand | 2 |
| 15 | Adjustment Knob | 2 |
| 16 | Long Bushing | 1 |
| 17 | Bushing | 2 |
| 18 | Inner Cap | 2 |
| 19 | Outer Cap | 2 |
| 20 | Foam Pad | 2 |
| 21 | Foam Grip | 2 |
| 22 | Square Plug (38mm x 38mm) | 7 |
| 23 | Oval Plug (20mm x 60mm) | 2 |
| 24 | Square Plug (25mm x 25mm) | 2 |
| 25 | Round Plug (ø25mm) | 4 |
| 26 | Bolt, Hex Head (M10 x 1.5 x 150mm) | 2 |
| 27 | Bolt, Hex Head (M10 x 1.5 x 90mm) | 1 |
| 28 | Bolt, Hex Head (M10 x 1.5 x 80mm) | 4 |
| 29 | Bolt, Hex Head (M8 x 1.25 x 55mm) | 5 |
| 30 | Bolt, Hex Head (M8 x 1.25 x 35mm) | 6 |
| 31 | Washer (M10) | 14 |
| 32 | Washer (M8) | 13 |
| 33 | Nylock Nut (M10 x 1.5) | 7 |
| 34 | Nylock Nut (M8 x 1.25) | 2 |
| 35 | Securing Knob | 1 |
| 36 | Caution Label | 1 |
| 37 | Serial Decal | 1 |
| 38 | Wrench | 2 |
| 39 | Manual | 1 |

LIMITED WARRANTY

MODEL 20-3011

WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and three years on the frame from the date of the original purchase from an authorized retailer. **THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA.** Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 2040 N Alliance Ave, Springfield, Missouri, USA, MO 65803, or email us at customer.care@staminaproducts.com, or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.

NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER. These warranties are not transferable. **IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY.** If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina **SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.**

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. **ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

NOTES

TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at **customer.care@staminaproducts.com** or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



**ONLINE
CUSTOMER CARE**
customer.care@staminaproducts.com
www.staminaproducts.com



**TELEPHONE
CUSTOMER CARE**
Tel: 1 (800) 375-7520



**FAX
CUSTOMER CARE**
Fax: (417) 889-8064



MAIL
STAMINA PRODUCTS, INC.
ATTN: Customer Care
2040 N Alliance Ave, Springfield, MO 65803

Would you like to receive email information or special offers from Stamina Products? Register at contact.staminaproducts.com

TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to register.staminaproducts.com. Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 2040 N Alliance Ave, Springfield, MO 65803.

PRODUCT REGISTRATION FORM

Stamina Products, Inc.
2040 N Alliance Ave, Springfield, MO 65803

Model Number: Serial Number:
Product Name:
Place Purchased:
Date of Purchase: Purchase Price:
First Name: Last Name:
City: State: Zip Code:
Email Address: Phone #: ()
Would you like to receive email information or special offers from Stamina Products?* ☐ Yes ☐ No *If yes, be sure your email address is included above.



Detach and Mail or Fax the Form Above



TO ORDER PARTS

If there are missing or damaged parts, you can go to parts.staminaproducts.com and order those parts. If you have questions, please contact customer care. Do not return the product. To order parts by mail, fill out the sheet below and fax it to 417-889-8064. The part will be mailed to your address.



Detach and Mail or Fax the Form Below



PARTS ORDER FORM

Stamina Products, Inc.
2040 N Alliance Ave, Springfield, MO 65803

Mr./Ms:
Address: Apt. #:
City: State: Zip Code:
IMPORTANT : We require your phone number to process the order!
Phone #: () Work Phone #: ()
Date of Purchase:
Model #:
Purchased From:

**IMPORTANT: Before filling out the portion below, make sure you have the correct information.
Refer to the parts list to make sure you're ordering the right parts!**

| PART # | DESCRIPTION | QUANTITY |
|------------|--------------------|----------|
| EXAMPLE: 1 | Rear Unit Assembly | 1 |
| | | |
| | | |
| | | |