


Owner's Manual

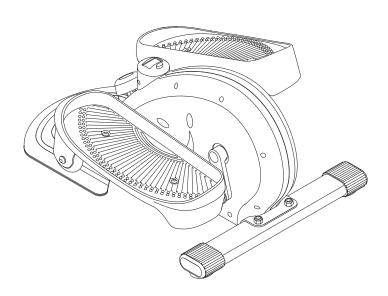

Product May Vary Slightly From Pictured.

CAUTION:

Weight on this product should not exceed 250 lbs.

This Product is Distributed Exclusively by



4435 West Manufacturers Street, Springfield, MO 65803
Customer Care
1 (800) 375-7520
www.staminaproducts.com

A WARNING

- Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use.
- Serious bodily injury can occur if this equipment is not assembled and used in accordance with the owner's manual.
- Follow all safety instructions in this owner's manual.

When calling for parts or service, please specify the following numbers:

Model#: 55-1602E, 55-1603E

:						
		=				

STAMINA PRODUCTS
MADE IN CHINA

© 2025 Stamina Products, Inc. 2025, 12

HO PIN

Download the müüv app to experience personalized fitness coaching for your Compact Strider!
müüv also supports other exercise equipment you own and hundreds
of healthy activities like outdoor walking to make moving fun!



Go to the App Store on your device or scan the QR Code for quick access.





DOWNLOAD APP

Unlimited workouts for the Compact Strider.
Assembly video included in the app
No subscription required

TABLE OF CONTENTS

Safety Instructions 3	Maintenance	13
Before You Begin 5	Conditioning Guidelines	14
Equipment Warning, Caution & Notice Labels 6	Warm-Up and Cool-Down	15
Hardware Identification Chart 7	Product Parts Drawing	16
Assembly Instructions 8	Parts List	17
Set Up Instructions 9	Warranty	19
Operational Instructions 10	Fax/Mail Ordering Form	21
Storage 13	-	

SAFETY INSTRUCTIONS

WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

MARNING Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

A WARNING To reduce the risk of serious injury, read the following Safety Instructions before using the InMotion® Compact Strider.

- The InMotion® Compact Strider should only be used after a thorough review of the Owner's Manual by all exercisers and saved for future reference.
- Make sure that the product is properly assembled and tightened before use.
- We recommend that two people be available for assembly of this product.
- Keep children and pets away from the InMotion® Compact Strider at all times. This product is for adult use only.
- It is recommended that you place this exercise equipment on an equipment mat.
- Set up and operate the InMotion® Compact Strider on a solid level surface. Do not position the InMotion® Compact Strider on loose rugs or uneven surfaces.
- Make sure that adequate space is available for access to and around the InMotion® Compact.
- Before using, always inspect the product for worn parts that should be replaced or loose parts that should be tightened.
- Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them.
- Do not wear loose clothing while using the InMotion® Compact Strider.
- Always wear proper footwear such as running, walking, or cross training shoes.
- Be careful to maintain your balance while assembling, mounting, using and dismounting the InMotion® Compact Strider. Loss of balance may result in a fall or serious bodily injury.
- To maintain your balance, always mount or dismount the InMotion® Compact Strider from the lowest foot pedal. Refer to the detail instructions on page 12.
- Keep both feet firmly and securely on the pedal caps while exercising.
- This unit is not equipped with a free-wheel. Pedal speed should be reduced in a controlled manner.
- The InMotion® Compact Strider should not be used by persons weighing over 250 pounds.
- The InMotion® Compact Strider should be used by only one person at a time.
- The InMotion® Compact Strider is for consumer use only. It is not for use in public or commercial settings.

EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE. REGISTER YOUR PRODUCT.



NEED HELP? CONTACT US FIRST 1 (800) 375-7520

customer.care@staminaproducts.com

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

With your body in mind,

Stamina Customer Care

To enact your extended warranty and to help us better serve you, please **go online** and register your new product.

register.staminaproducts.com

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



customer.care@staminaproducts.com www.staminaproducts.com



1 (800) 375-7520



FAX (417) 889-8064



MAII

Stamina Products, Inc. ATTN: Customer Care 4435 West Manufacturers Street, Springfield, MO 65803

BEFORE YOU BEGIN

Thank you for choosing the InMotion® Compact Strider. We take great pride in this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The InMotion® Compact Strider provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See the next page for an image of the serial decal. Model number and serial number are required when


calling for assistance.

Read this manual carefully before using the InMotion® Compact Strider.

Providing you with a quality product is Stamina's top priority. However, sometimes there could be a missing or incorrectly sized part. If you have any questions or problems with the parts included with your InMotion® Compact Strider, please do not return the product. Contact us FIRST!

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on staminaproducts.com. Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

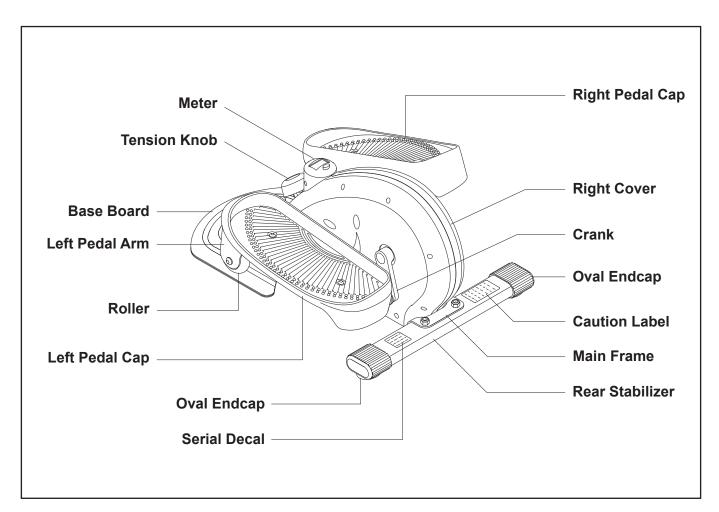

THE FOLLOWING TOOLS ARE INCLUDED FOR ASSEMBLY:



Wrench



Allen Wrench (6mm)

EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the InMotion® Compact Strider. Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

CAUTION LABEL(55)

ACAUTION

For consumer use only. Failure to follow all warnings and instructions could result in injury or property damage. Before assembling or using this product, read and follow the Owner's Manual and all other warnings and instructions that accompany this product. Replace this caution label if damaged, illegible, or removed.

Keep others including children & pets away from equipment when in use.

Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35 or have any pre-existing health condition. Always make sure all nuts and bolts are securely tightened before using this product. This product should not be used by person weighing more than 250 lbs. unless otherwise stated in your Owner's Manual.

BUTTON BATTERY WARNING(83)




SERIAL DECAL(78)



To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.

HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the hardware used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

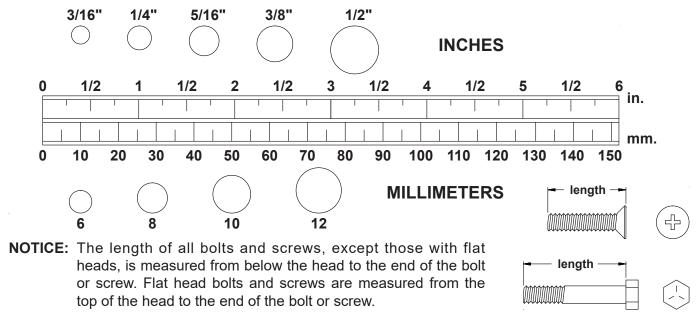

After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.

Part	Number and Description	Qty
42	Carriage Bolt (M10 x 1.5 x 43mm)	2
45 59	Bolt, Button Head (M8 x 1.25 x 20mm) Bolt, Button Head (M8 x 1.25 x 16mm)	4 2
51	Nylock Nut (M10 x 1.5)	2
40	Stand	2

ASSEMBLY INSTRUCTIONS

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to staminaproducts.com under the Customer Care section and order the part needed, e-mail us at customer.care@staminaproducts.com, or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.

STEP 1

Attach the REAR STABILIZER(2) to the MAIN FRAME(1) with CARRIAGE BOLTS(M10x1.5x43mm) (42) and NYLOCK NUTS(M10x1.5)(51).

STEP 2


Attach the BASE BOARD(82) to the MAIN FRAME(1) with the STANDS(40) and BUTTON HEAD BOLTS (M8x1.25x16mm)(59).

NOTE: Make sure the BASE BOARD(82) is assembled with the FOAM PADS(38, 39) on the bottom.

STEP 3

Attach the LEFT PEDAL CAP(33) to the LEFT PEDAL ARM(3) with BUTTON HEAD BOLTS (M8x1.25x20mm)(45). Repeat on the other side.

NOTE: The LEFT and RIGHT PEDAL CAPS(33, 34) have a raised lip on three sides. Attach the LEFT and RIGHT PEDAL CAPS(33, 34) to the LEFT and RIGHT PEDAL ARMS(3, 4) so that the side without the raised lip is on the outside.

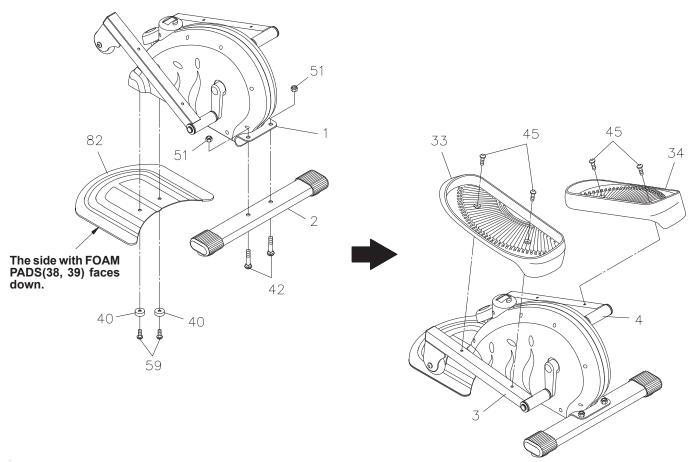


SET UP INSTRUCTIONS

Place the InMotion® Compact Strider in the area where it will be used. It is recommended that the InMotion® Compact Strider be placed on an equipment mat. The InMotion® Compact Strider is approximately 24.3 inches long x 17 inches wide x 11.4 inches tall. (These dimensions may vary up to one inch.) Make sure that adequate space is available for access to, passage around and emergency dismount from the InMotion® Compact Strider. A minimum of 20 inches on at least one side and 20 inches either behind or in front of the InMotion® Compact Strider is required for safe operation.

LEVELING: Adjust the location of InMotion® Compact Strider to ensure InMotion® Compact Strider sits on the floor without rocking.

MOVING: Grasp the REAR STABILIZER(2) to move the InMotion® Compact Strider. Do not use the PEDAL ARMS(3, 4) to move the InMotion® Compact Strider. The PEDAL ARMS(3, 4) will move and may pinch your hand or fingers.

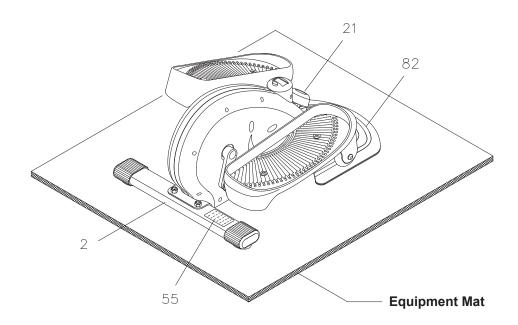

FUNCTION INSPECTION:

Visually inspect the InMotion® Compact Strider to verify that assembly is as shown in the above illustration. Check the function of the InMotion® Compact Strider. If you have good balance and are familiar with the InMotion® Compact Strider, stand on the foot pedals. If you do not have good balance, sit in a chair and place feet on the foot pedals. Slowly move your highest foot forward and follow the natural path of the machine. Turn the crank slowly through one complete revolution to verify that the drive train functions properly. Adjust the **TENSION KNOB(21)** and verify that the resistance changes.

CAUTION: Locate and read the **CAUTION LABEL(55)** on the InMotion® Compact Strider. Make sure that all users read the **CAUTION LABEL(55)**.

A WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- The monitor operates with a 1.5V, LR44 battery. Replace the battery when you see inconsistencies in the display. Keep batteries in original packaging until ready to use.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery.
- Remove and immediately recycle or dispose of used batteries or batteries from equipment that has not been used for an extended period of time according to local regulations and keep away from children, do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, disassemble, heat above manufacturer's specified temperature or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

OPERATIONAL INSTRUCTIONS

USING THE FITNESS METER

POWER ON: Pedal movement or press the button.

POWER OFF: Automatic shut off after four minutes of inactivity.

FUNCTION BUTTON:

Press and release to select functions.

Press and hold for four seconds to reset all functions to zero.



FUNCTIONS:

SCAN: Automatically scans **COUNT, TIME, CALORIES,** and **DISTANCE** in sequence with a change every six seconds. Press and release the button until "**SCAN**" appears on the display.

COUNT: Displays the total number of strides you have taken from zero to 9999 strides.

TIME: Displays the time from one second up to 99:59 minutes.

CALORIES: Displays the calorie consumption from zero to 9999 Kcal.

The calorie readout is an estimate for an average user. It should be used only as a

comparison between workouts on this unit.

DISTANCE: Displays the distance from zero to 999.9 miles.

NOTE: The meter will shut off automatically after four minutes of inactivity. All function values will


be kept. Push the button and hold it down for four seconds to reset all functions to zero.

BATTERY

The meter operates with a 1.5v LR44 button cell battery. Replace the battery when you see inconsistencies in the display.

HOW TO INSTALL AND REPLACE BATTERY:


- 1. Remove the METER(84) from the InMotion® Compact Strider. Unplug the SENSOR WIRE(23). Place the METER(84) up-side down as shown in the illustration.
- 2. Refer to the illustration. Unscrew the round head screw to remove the battery cover, and then slide out the old battery.
- 3. Install a new button cell battery. Cover with the battery cover and secure with the round head screw. Assembly the METER(84) back to the InMotion® Compact Strider.
- NOTE: 1. Ultimate disposal of battery should be handled according to all state and federal laws and regulations.
 - 2. Do not dispose of batteries in fire.

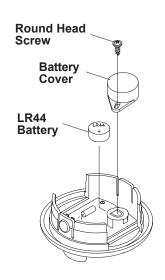


OPERATIONAL INSTRUCTIONS

STANDING WORKOUT

Using the InMotion® Compact Strider while standing exercises your core and other muscles. If you have good balance and are familiar with the elliptical, you may use the InMotion® Compact Strider while standing. Always mount and dismount the elliptical from the lowest foot pedal (as shown below). Stand on the foot pedals with the front of your shoes close to the front edge of the pedal cap. For more stability, place a chair next to the InMotion® Compact Strider and place your hand on the chair back while stepping onto the pedals. Move your highest foot forward and follow the natural path of the machine. If necessary, use a wall or table to help maintain your balance while using the InMotion® Compact Strider. Start on a load level that is comfortable until you are familiar with the machine. Once you are familiar with the elliptical and comfortable with the resistance, adjust the load level as described below to achieve the workout desired.

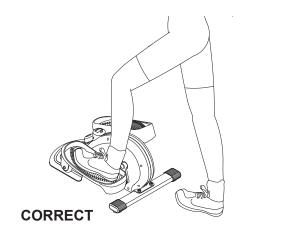

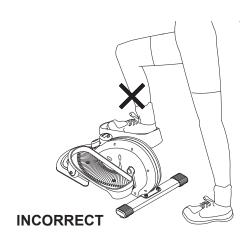


SITTING WORKOUT

Refer to the illustrations below. Seated workouts are effective for toning legs and hips, and for improving circulation and mobility. When sitting, your feet will face the opposite direction on the pedals than when standing. This will put your feet, ankles, and hips at the proper workout angles. To adjust the **METER(84)** to face you, find the two cavities on either side of the meter case, grasp the top of the meter and pull the top of the **METER(84)** from the casing being careful not to disconnect or damage the **SENSOR WIRE(23)**. Turn the meter 180 degrees, and push it back into position.

Place the InMotion® Compact Strider on the floor in front of a chair as shown in the illustration below. Sit in the chair and pedal the InMotion® Compact Strider with your feet.

CAUTION: Do not stand up on the InMotion® Compact Strider in this workout position.

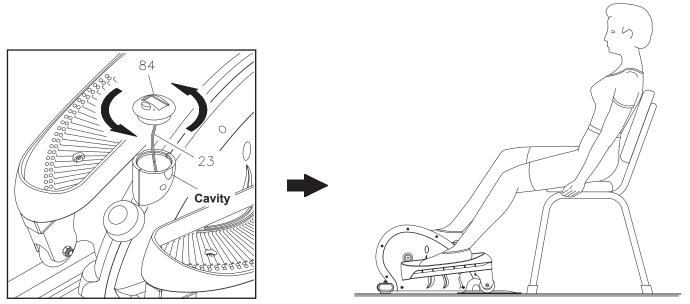


OPERATIONAL INSTRUCTIONS

FORWARD AND REVERSE

The InMotion® Compact Strider can be used in forward and reverse directions to vary the muscles that you work. This will help you to stay motivated and achieve the best results. To change directions, simply slow the pedals down until they stop, then pedal in the opposite direction.

LOAD LEVEL ADJUSTMENT

The load level of InMotion® Compact Strider can be changed at any time during your workout. Adjusting your load level will allow you to increase or decrease your intensity level. To increase the load, turn the **TENSION KNOB(21)** clockwise. To decrease the load, turn the **TENSION KNOB(21)** counterclockwise.

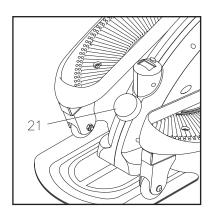

STORAGE

- To store the InMotion® Compact Strider simply keep it in a clean dry place.
- The InMotion® Compact Strider is approximately 24.3 inches long x 17 inches wide x 11.4 inches tall. These dimensions will vary. Please measure your InMotion® Compact Strider if exact dimensions are needed.
- Grasp the **REAR STABILIZER(2)** to move the InMotion® Compact Strider. Do not use the Pedal Arms to move the InMotion® Compact Strider.

MAINTENANCE

The safety and integrity designed into the InMotion® Compact Strider can only be maintained when the InMotion® Compact Strider is regularly examined for damage and wear. Special attention should be given to the following:

- Adjust the TENSION KNOB(21) and verify that it functions properly and the resistance changes.
- Verify that the **CAUTION LABEL(55)** is in place and easy to read. Call Stamina Products immediately at 1-800-375-7520 for a replacement **CAUTION LABEL(55)** if it is missing or damaged.
- It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
- Worn or damaged components must be replaced immediately or the InMotion® Compact Strider removed from service until repair is made.
- Only Stamina Products supplied components should be used to maintain/repair the InMotion® Compact Strider.
- Keep your InMotion® Compact Strider clean by wiping it off with an absorbent cloth after use.

NOTE: A standard crank extractor tool is required to remove the CRANKS(68) from the AXLE(69).

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

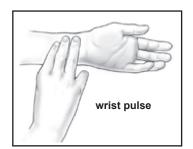

Target Heart Rate Zone Estimated by Age*


Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute

^{*} For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: 220 - Age = predicted maximum heart rate

WARM-UP and COOL-DOWN

Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool down should be completed after each strength training session.

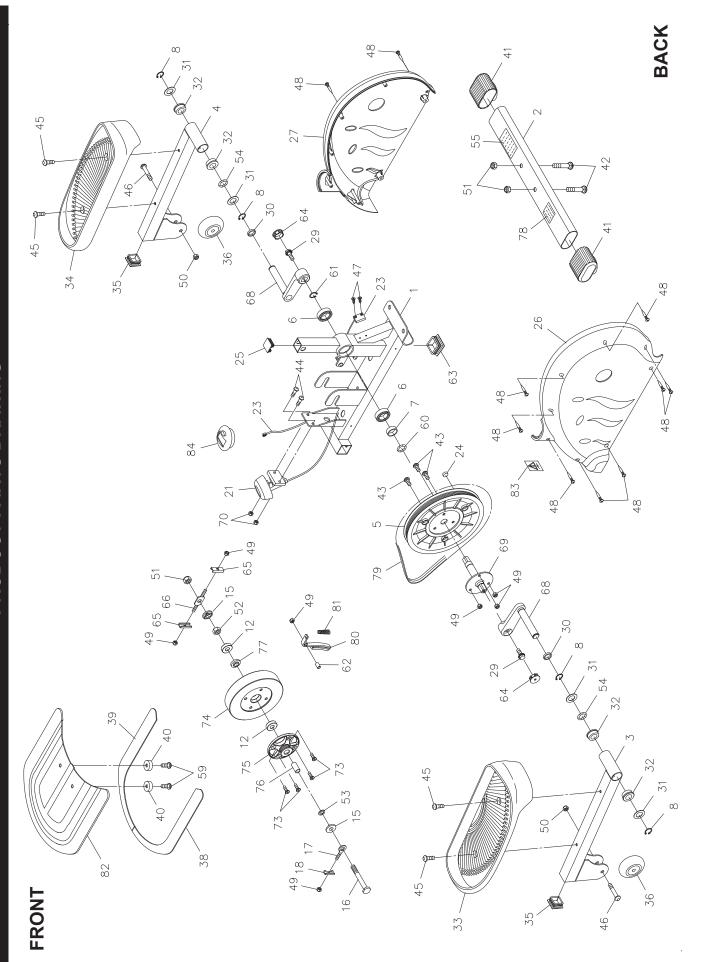

PARTS LIST

PART#	PART NAME	QTY
1	Main Frame	1
2	Rear Stabilizer	1
3	Left Pedal Arm	1
4	Right Pedal Arm	1
5	Pulley	1
6	Bearing (6003)	2
7	Pulley Spacer	1
8	C Ring (16mm)	4
12	Bearing (6000)	2
15	Spacer Cap	2
16	Flywheel Shaft Bolt (M10 x 1.5 x 82mm)	1
17	Eyebolt	1
18	Tension Bracket	1
21	Tension Knob	1
23	Sensor Wire	1
24	Magnet	1
25	Square Plug (25mm x 25mm)	1
26	Left Cover	1
27	Right Cover	1
29	Flange Bolt (M8 x 1.25 x 15mm)	2 2
30	Crank Spacer	4
31 32	Large Washer (16.3 x 24mm)	4
33	Pedal Arm Bushing Left Pedal Cap	1
34	Right Pedal Cap	1
35	Square Plug (30mm x 30mm)	2
36	Roller	2
38	Left Foam Pad	1
39	Right Foam Pad	1
40	Stand	2
41	Oval Endcap (30mm x 60mm)	2
42	Carriage Bolt (M10 x 1.5 x 43mm)	2
43	Bolt, Button Head (M6 x 1 x 13mm)	3
44	Screw, Round Head (M5 x 0.8 x 13mm)	2
45	Bolt, Button Head (M8 x 1.25 x 20mm)	4
46	Bolt, Button Head (M8 x 1.25 x 42mm)	2
47	Screw, Round Head (M3.4 x 8mm)	2
48	Screw, Round Head (M4 x 25mm)	10
49	Nylock Nut (M6 x 1)	7
50	Nylock Nut (M8 x 1.25)	2
51	Nylock Nut (M10 x 1.5)	3
52	Nut (M10 x 1.5)	1
53	Washer (M10)	1
54	Wavy Washer (M16)	2
55	Caution Label	1
56	Wrench	1
57	Allen Wrench (6mm)	1

PARTS LIST

PART#	PART NAME	QTY
58	Manual	1
59	Bolt, Button Head (M8 x 1.25 x 16mm)	2
60	Wavy Washer (M17)	1
61	C Ring (17mm)	1
62	Pu Bushing	1
63	Square Plug (38mm x 38mm)	1
64	Crank Cap	2
65	Large Tension Bracket	1
66	Double Eyebolt	1
68	Crank	2
69	Axle	1
70	Nylock Nut (M5 x 0.8)	2
73	Bolt, Flat Head (M6 x 1 x 15mm)	4
74	Flywheel	1
75	Flywheel Pulley	1
76	Flywheel Spacer	1
77	Bearing Spacer	1
78	Serial Decal	1
79	V-Ribbed Belt (270 J4)	1
80	Brake Brace	1
81	Spring	1
82	Base Board	1
83	Button Battery Warning	1
84	Meter	1

MODEL 55-1602E, 55-1603E

WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA. Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 4435 West Manufacturers Street, Springfield, Missouri, USA, MO 65803, or email us at customer. care@staminaproducts.com, or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.

NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER. These warranties are not transferable. IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY. If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at **customer.care@staminaproducts. com** or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



ONLINE
CUSTOMER CARE
customer.care@staminaproducts.com
www.staminaproducts.com

PRODUCT REGISTRATION FORM









STAMINA PRODUCTS, INC. ATTN: Customer Care 4435 West Manufacturers Street, Springfield, MO 65803

Would you like to recieve email information or special offers from Stamina Products? Register at contact.staminaproducts.com

TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to register.staminaproducts.com. Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 4435 West Manufacturers Street, Springfield, MO 65803.

Stamina Products, Inc.

	4435 West Manufacturers Street, Springfield, MO 65803	
Model Number:	Serial Number:	
Product Name:		
Place Purchased:		
Date of Purchase:	Purchase Price:	
First Name:	Last Name:	
City:	State: Zip Code:	
Email Address:		
Would you like to receive email information	on or special offers from Stamina Products?*YesNo *If yes, be sure your email	I address is included above.
∮ o	Detach and Mail or Fax the Form Above	%
TO ORDER PARTS		
ease contact customer care. D	arts, you can go to parts.staminaproducts.com and order those par Do not return the product. To order parts by mail, fill out the sl	
17-889-8064. The part will be mail	led to your address.	
f o	Detach and Mail or Fax the Form Below	4
PARTS ORDER FORM	Stamina Products, Inc. 4435 West Manufacturers Street, Springfield, MO 65803	
Mr./Ms:		
Address:	Apt. #:	
City:	7: 0 1	
	State: Zip Code:	
•	e require your phone number to process the order!	
IMPORTANT : We	require your phone number to process the order!	
IMPORTANT : We	require your phone number to process the order! Work Phone #: ()	
IMPORTANT : We Phone #: () Date of Purchase:	require your phone number to process the order! Work Phone #: ()	
IMPORTANT : We Phone #: () Date of Purchase: Model #:	require your phone number to process the order!	
IMPORTANT : We Phone #: () Date of Purchase: Model #: Purchased From:	e require your phone number to process the order! Work Phone #: ()	
IMPORTANT : We Phone #: () Date of Purchase: Model #: Purchased From:	we require your phone number to process the order! Work Phone #: ()	
IMPORTANT : We Phone #: () Date of Purchase: Model #: Purchased From: IMPORTANT:	Work Phone #: ()	
IMPORTANT : We Phone #: ()	* require your phone number to process the order! Work Phone #: () **Before filling out the portion below, make sure you have the correct information Refer to the parts list to make sure you're ordering the right parts!	QUANTITY
IMPORTANT : We Phone #: ()	* require your phone number to process the order! Work Phone #: () **Before filling out the portion below, make sure you have the correct information Refer to the parts list to make sure you're ordering the right parts!	QUANTITY