


STAMINA[®]

BENCH PRESS MACHINE

Owner's Manual

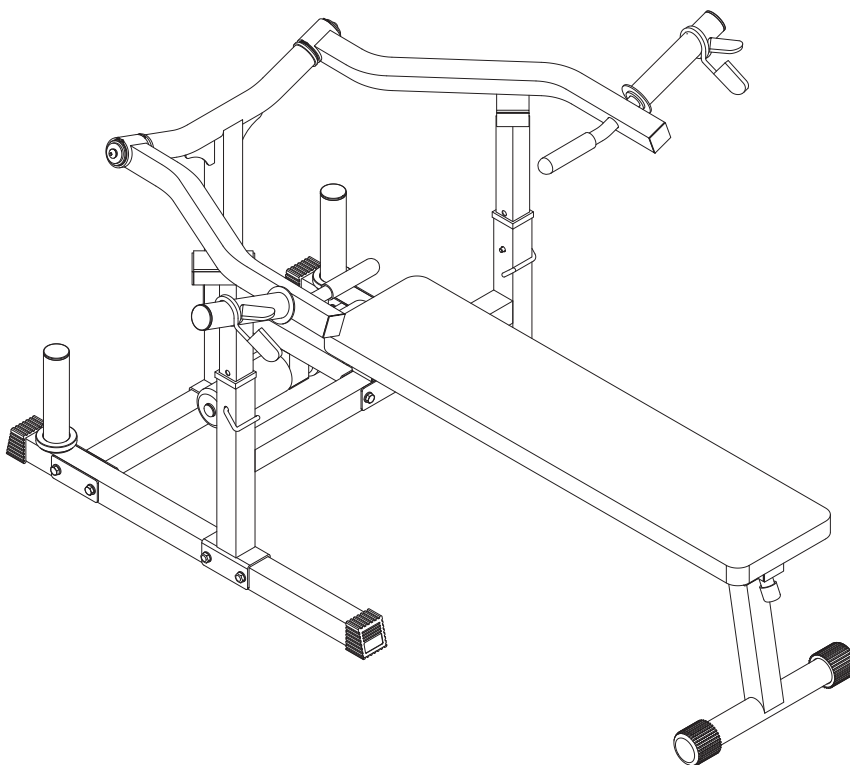

Product May Vary Slightly From Pictured.

WARNING: The User Weight on this product should not exceed 250 lbs.

! WARNING

- Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use.
- Serious bodily injury can occur if this equipment is not assembled and used in accordance with the owner's manual.
- Follow all safety instructions in this owner's manual.

When calling for parts or service, please specify the following numbers:

Model#: 50-3100

S/N: _____

This Product is Distributed Exclusively by



4435 West Manufacturers Street, Springfield, MO 65803
Customer Care
1 (800) 375-7520
www.staminaproducts.com

STAMINA PRODUCTS
MADE IN CHINA

©2025 Stamina Products, Inc.
2025, 10

TABLE OF CONTENTS

Safety Instructions	2	Maintenance	13
Before You Begin	4	Conditioning Guidelines	14
Equipment Warning, Caution & Notice Labels ...	5	Warm-Up and Cool-Down	15
Hardware Identification Chart	6	Product Parts Drawing	16
Assembly Instructions	7	Parts List	17
Operational Instructions	12	Warranty	18
Storage	13	Fax/Mail Ordering Form	19

SAFETY INSTRUCTIONS

⚠ WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

⚠ WARNING Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

⚠ WARNING To reduce the risk of serious injury, read the following Safety Instructions before using the Bench Press Machine.

- The Bench Press Machine should only be used after a thorough review of the Owner's Manual by all exercisers and saved for future reference.
- Make sure that the product is properly assembled and tightened before use.
- We recommend that two people be available for assembly of this product.
- Keep children and pets away from the Bench Press Machine at all times. This product is for adult use only.
- Use the Bench Press Machine on a level surface. It is recommended that you place this product on an equipment mat.
- Set up and operate the Bench Press Machine on a solid level surface. Do not position the product on loose or uneven surfaces.
- Make sure that adequate space of 8 feet wide x 10 feet long is available for access to and around the product.
- Before using, always inspect the product for worn parts that should be replaced or loose parts that should be tightened.
- Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them.
- Do not wear loose clothing while using the Bench Press Machine.
- Always wear proper footwear such as running, walking, or cross training shoes.
- Be careful to maintain your balance while assembling, mounting, using and dismounting the Bench Press Machine. Loss of balance may result in a fall or serious bodily injury.
- The Bench Press Machine has a maximum user weight limit of 250 lbs., a maximum weight of 200 lbs. on the weight loader and a maximum weight of 200 lbs. on the plate storage.
- The Bench Press Machine should be used by only one person at a time.
- The Bench Press Machine is for consumer use only. It is not for use in public or semipublic facilities.

EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE. REGISTER YOUR PRODUCT.



**NEED HELP?
CONTACT US FIRST
1 (800) 375-7520**
customer.care@staminaproducts.com

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

With your body in mind,
Stamina Customer Care

To enact your extended warranty and to help us better serve you, please go online and register your new product.

register.staminaproducts.com

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



ONLINE

customer.care@staminaproducts.com
www.staminaproducts.com



TELEPHONE

1 (800) 375-7520



FAX

(417) 889-8064



MAIL

Stamina Products, Inc.
ATTN: Customer Care
4435 West Manufacturers
Street, Springfield, MO 65803



facebook.com/StaminaProducts
facebook.com/AeroPilates

CUSTOMER CARE HOURS:

Monday-Thursday, 7:30 AM-5:00 PM, Central Time
Friday, 8:00 AM-3:00 PM, Central Time

BEFORE YOU BEGIN

Thank you for choosing the Bench Press Machine. We take great pride in this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The Bench Press Machine provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See the next page for an image of the serial decal. Model number and serial number are required when


calling for assistance.

Read this manual carefully before using the Bench Press Machine.

Providing you with a quality product is Stamina's top priority. However, sometimes there could be a missing or incorrectly sized part. If you have any questions or problems with the parts included with your Bench Press Machine, please do not return the product. Contact us **FIRST!**

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on staminaproducts.com. Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

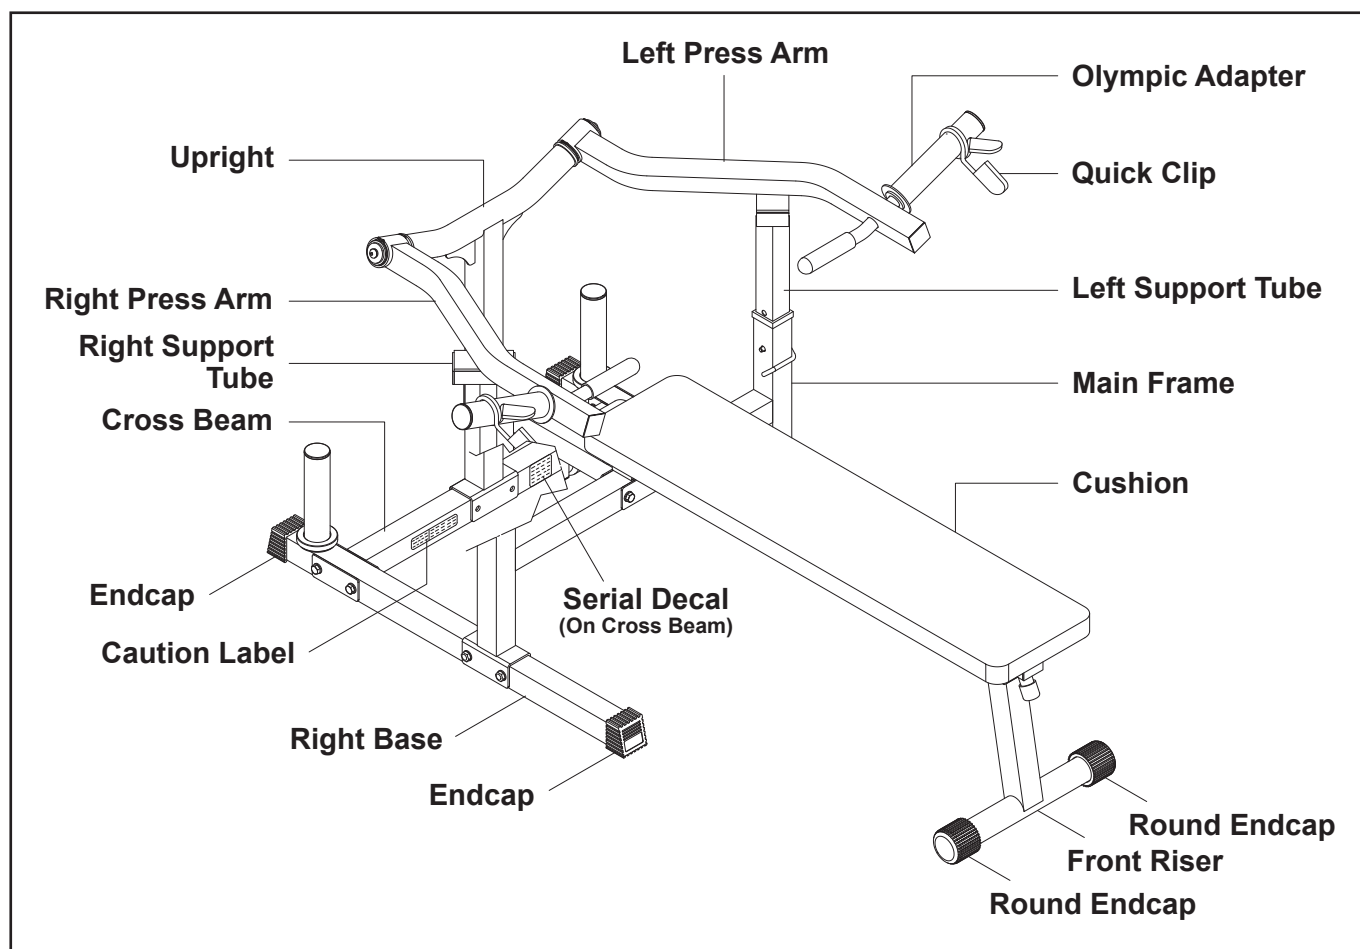

THE FOLLOWING TOOLS ARE REQUIRED FOR ASSEMBLY:

-  Allen Wrench (6mm) (Included)
-  Allen Wrench (4mm) (Included)
-  Adjustable Wrench

NOTE: Assembly will be more convenient if you have a set of standard and metric wrenches.

EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the Bench Press Machine. Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

CAUTION LABEL(49)

CAUTION For consumer use only. Failure to follow all warnings and instructions could result in injury or property damage. Before assembling or using this product, read and follow the Owner's Manual and all other warnings and instructions that accompany this product. Replace this caution label if damaged, illegible, or removed.	Keep others including children & pets away from equipment when in use. Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35 or have any pre-existing health condition. Always make sure all nuts and bolts are securely tightened before using this product. This product should not be used by person weighing more than 250 lbs. unless otherwise stated in your Owner's Manual.
---	---

PINCH POINT DECAL(50)




SERIAL DECAL(51)

GUARANTEED PERFORMANCE	
 STAMINA	
Customer Care	
1 (800) 375-7520	
Mon-Thurs • 7:30am - 5pm, Fri • 8am - 3pm CST FAX: (417) 889-8064 • www.staminaproducts.com MADE IN CHINA	
Model #	Serial #
50-3100	

To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.

HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the hardware used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

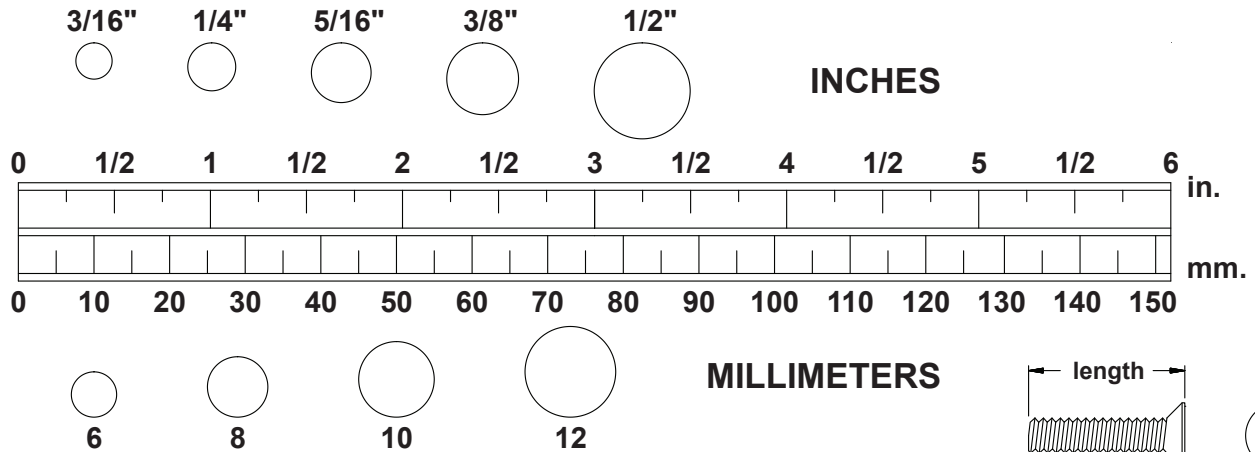


NOTICE: The length of all bolts and screws, except those with flat heads, is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.


After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.




(36) Set Screw (M8 x 1.25 x 10mm) 2pcs



(37) Button Head Bolt (M10 x 1.5 x 25mm) 2pcs



(38) Hex Bolt (M8 x 1.25 x 16mm) 6pcs



(39) Hex Bolt (M10 x 1.5 x 70mm) 14pcs



(40) Hex Bolt (M10 x 1.5 x 80mm) 2pcs



(41) Washer (M10) 32pcs




(42) Washer (M8) 6pcs




(43) Lock Washer (M10) 2pcs



(44) Nylock Nut (M10x1.5) 16pcs

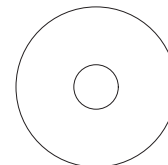

(45) Large Washer (ø11 x ø36 x T3) 2pcs

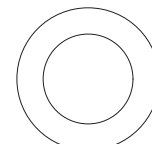

(46) Large Washer (ø20.5 x ø32 x T1.5) 2pcs

ASSEMBLY INSTRUCTIONS

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to staminaproducts.com under the Customer Care section and order the part needed, e-mail us at customer.care@staminaproducts.com, or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.


Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.

STEP 1

Attach the **LEFT** and **RIGHT BASE(1, 2)** to the **CROSS BEAM(4)** with **HEX BOLTS(M10x1.5x70mm)(39)**, **WASHERS(M10)(41)**, and **NYLOCK NUTS(M10x1.5)(44)**. The support plate faces outside as shown in the diagram below.

STEP 2


Attach the **MAIN FRAME(3)** to the **LEFT** and **RIGHT BASE(1, 2)** with **HEX BOLTS(M10x1.5x70mm)(39)**, **WASHERS(M10)(41)**, and **NYLOCK NUTS(M10x1.5)(44)**.

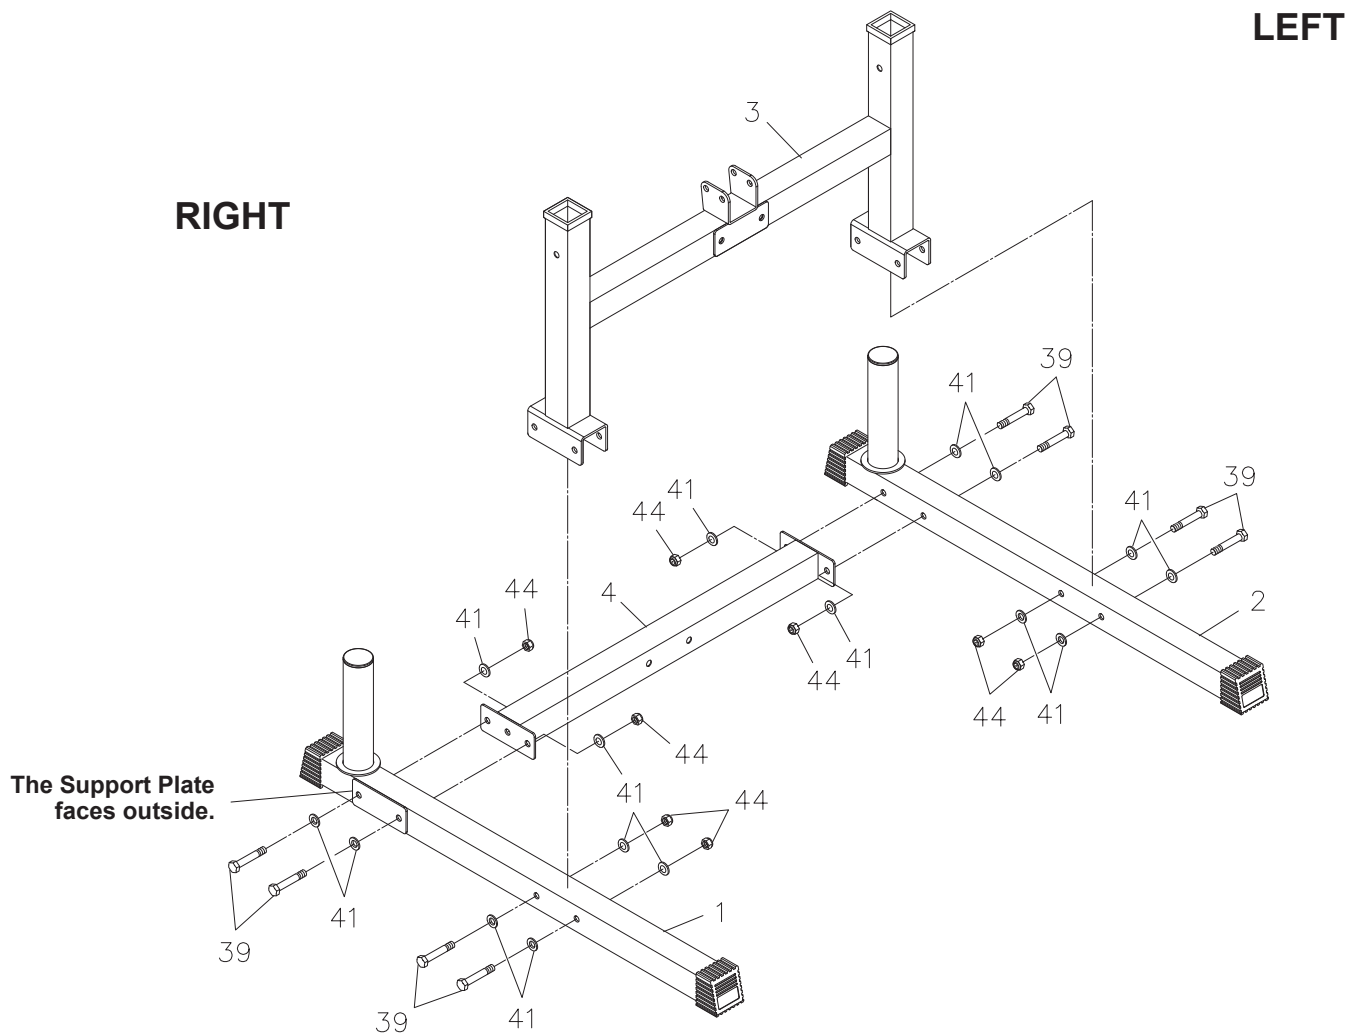

ASSEMBLY INSTRUCTIONS

STEP 3

Clip the bracket on the **UPRIGHT(5)** onto the **CROSS BEAM(4)**, then attach the **CONNECT TUBE(6)** to the **UPRIGHT(5)** and the **MAIN FRAME(3)** with **HEX BOLTS(M10x1.5x70mm)(39)**, **WASHERS(M10)(41)**, and **NYLOCK NUTS(M10x1.5)(44)**. Secure the **UPRIGHT(5)** to the **CROSS BEAM(4)** with **HEX BOLTS(M10x1.5x70mm)(39)**, **WASHERS(M10)(41)**, and **NYLOCK NUTS(M10x1.5)(44)**.

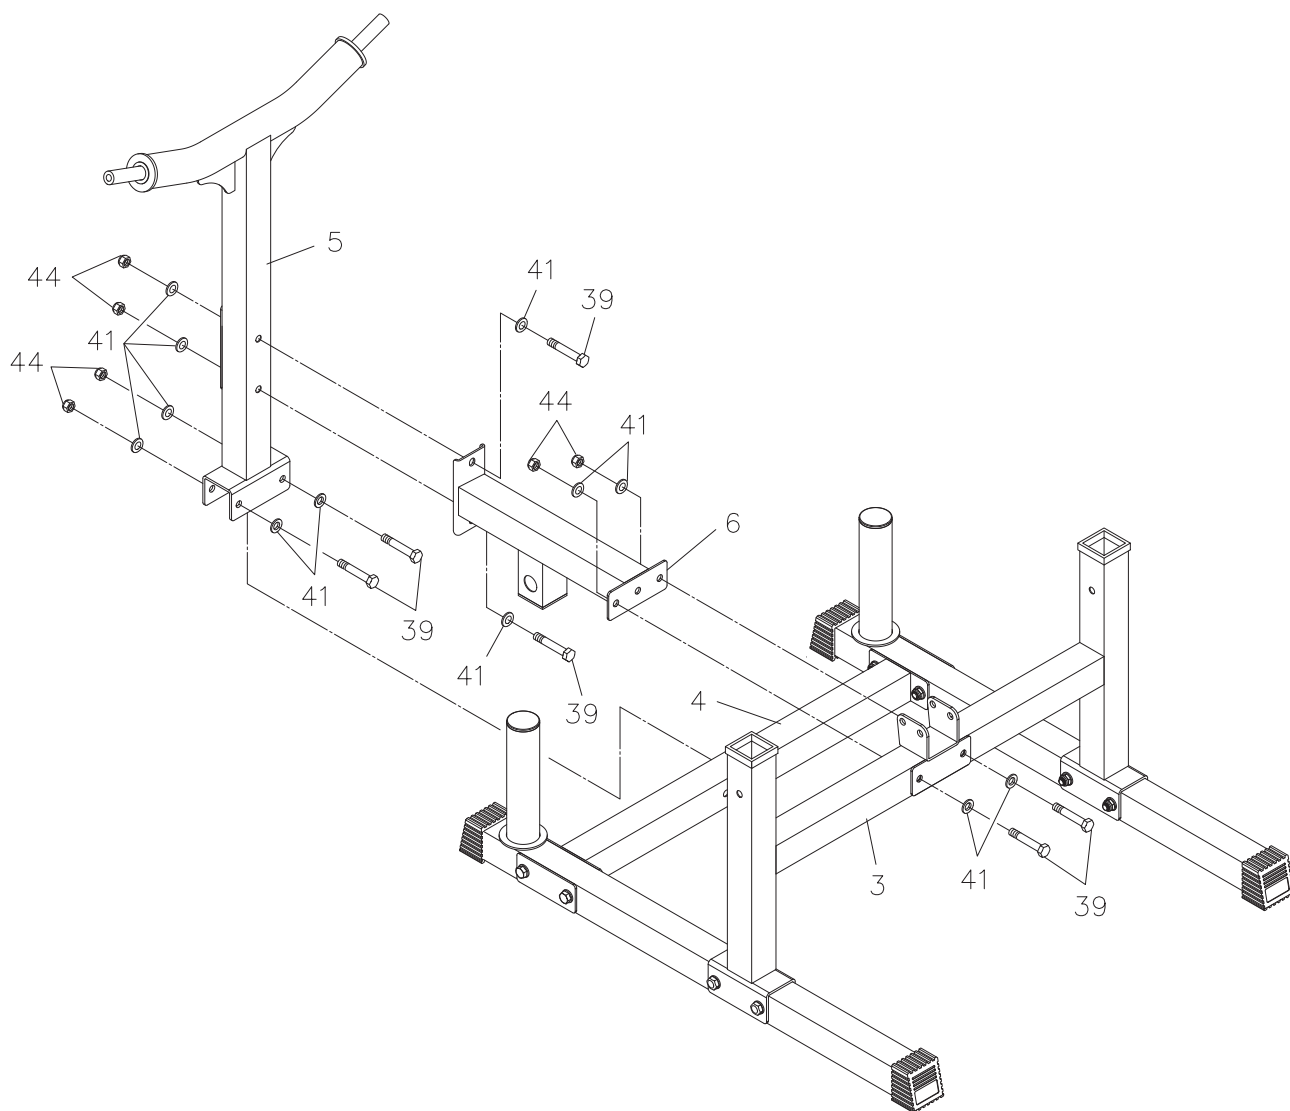

ASSEMBLY INSTRUCTIONS

STEP 4


Attach the **FRONT RISER(9)** to the **CUSHION SUPPORT FRAME(10)** with **HEX BOLT(M10x1.5x80mm)(40)**, **WASHERS(M10)(41)**, and **NYLOCK NUT(M10x1.5)(44)**. Lock the **FRONT RISER(9)** into the unfold position with the **BALL PIN(32)**.

STEP 5

Attach the **CUSHION SUPPORT FRAME(10)** to the **MAIN FRAME(3)** with **HEX BOLT(M10x1.5x80mm)(40)**, **WASHERS(M10)(41)**, and **NYLOCK NUT(M10x1.5)(44)**. Insert the **BALL PIN(32)** into the **MAIN FRAME(3)** for storage.

STEP 6

Insert the **FOAM ROD(14)** through the hole on the **CONNECT TUBE(6)**. Press the **FOAM PADS(22)** onto both sides of the **FOAM ROD(14)**.

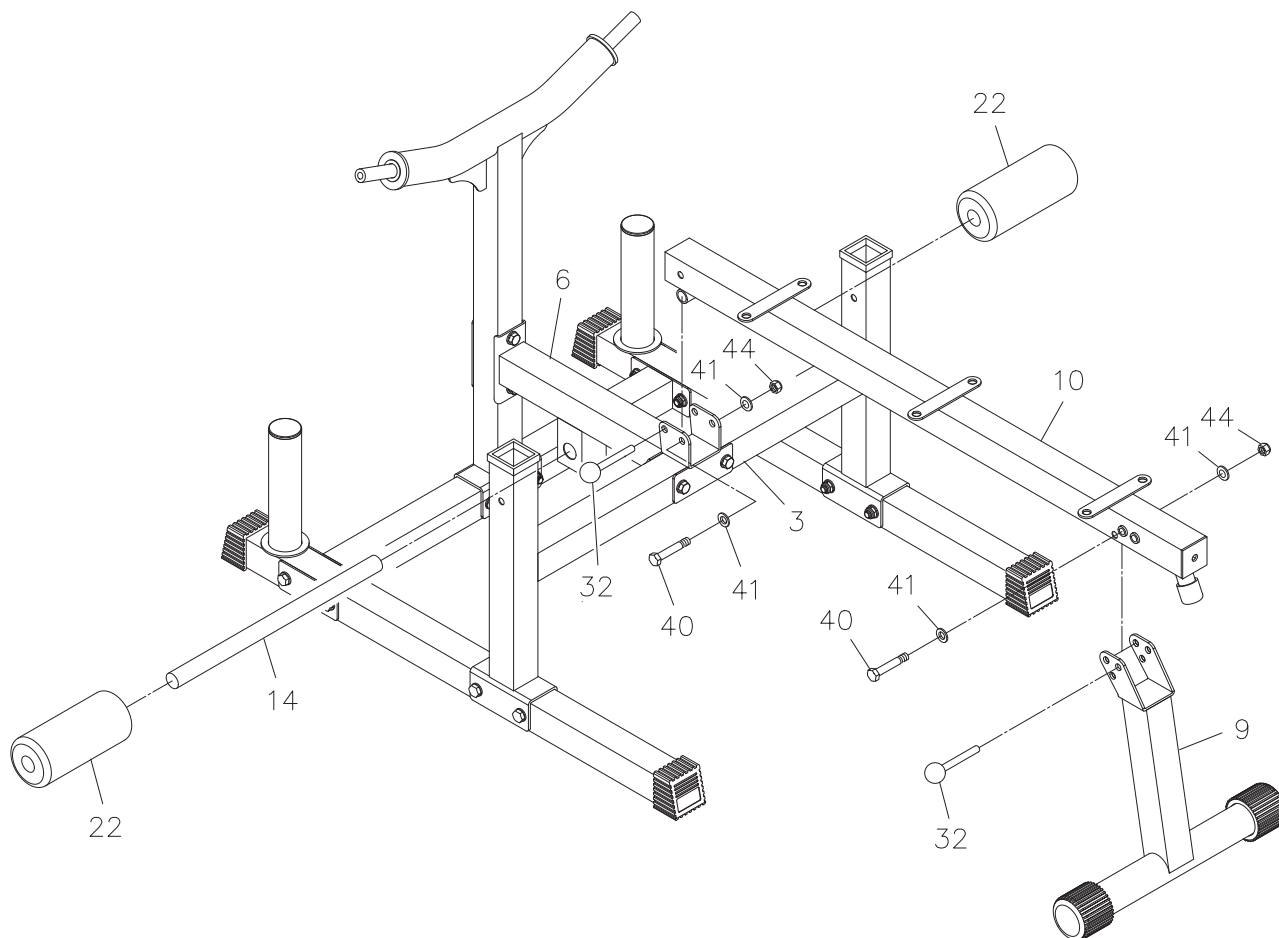

ASSEMBLY INSTRUCTIONS

STEP 7

Insert the **LEFT** and **RIGHT SUPPORT TUBES**(11, 12) into the **MAIN FRAME**(3) and lock in position with the **LEFT** and **RIGHT SAFETY HOOKS**(30, 31).


NOTE: Always adjust the **LEFT** and **RIGHT SUPPORT TUBES**(11, 12) to the same height on both sides.

STEP 8

Attach the **LEFT PRESS ARM**(7) to the **UPRIGHT**(5) with **LARGE WASHER**($\varnothing 20.5 \times \varnothing 32 \times 1.5$ mm thick) (46), **LARGE WASHER**($\varnothing 11 \times \varnothing 36 \times 3$ mm thick)(45), **LOCK WASHER**(M10)(43), and **BUTTON HEAD BOLT**(M10x1.5x15mm)(37). Repeat on the right side with **RIGHT PRESS ARM**(8).

RIGHT

LEFT

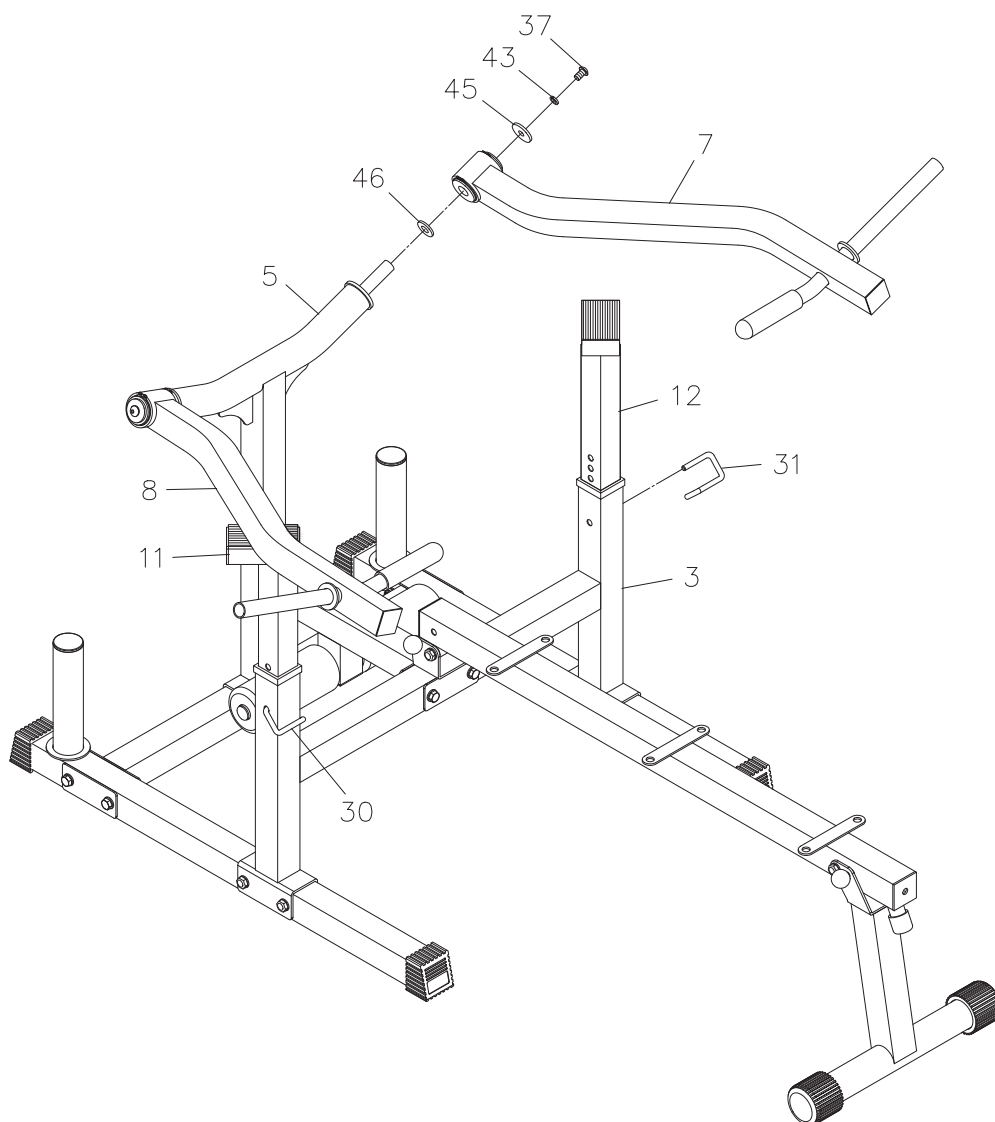


ASSEMBLY INSTRUCTIONS

STEP 9

Slide the **OLYMPIC ADAPTER(13)** onto the **LEFT PRESS ARM(7)** and secure in position with the **SET SCREW(M8x1.25x10mm)(36)**. Clip the **QUICK CLIP(29)** onto the **OLYMPIC ADAPTER(13)**. Repeat on the right side.

STEP 10


Attach the **CUSHION(15)** to the **CUSHION SUPPORT FRAME(10)** with **WASHERS(M8)(42)** and **HEX BOLTS(M8x1.25x16mm)(38)**.

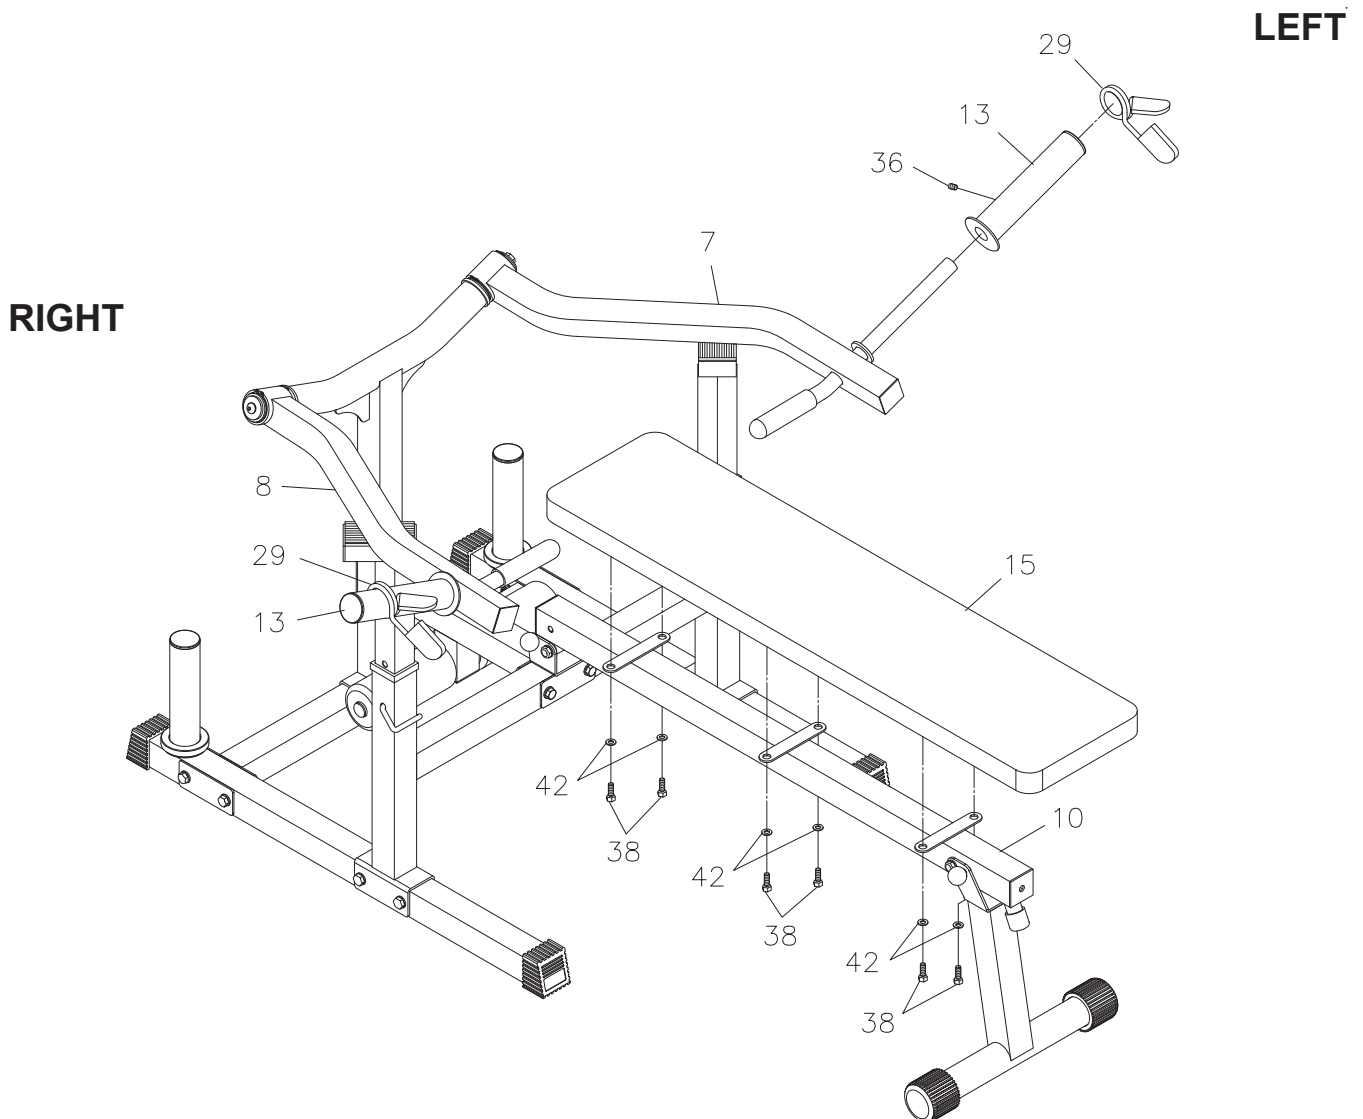

OPERATIONAL INSTRUCTIONS

Angle Adjustment Of The Cushion


The **CUSHION(15)** can be set at an angle by adjusting the **FRONT RISER(9)** for more exercise functions, such as the incline chest press and decline sit-up functions. Refer to illustration A. Pull out the **BALL PIN(32)** from the **FRONT RISER(9)**, then swing the **FRONT RISER(9)** backward to the folded position and lock in position with the **BALL PIN(32)**. Lower the front end of the **CUSHION SUPPORT FRAME(10)** onto the ground.

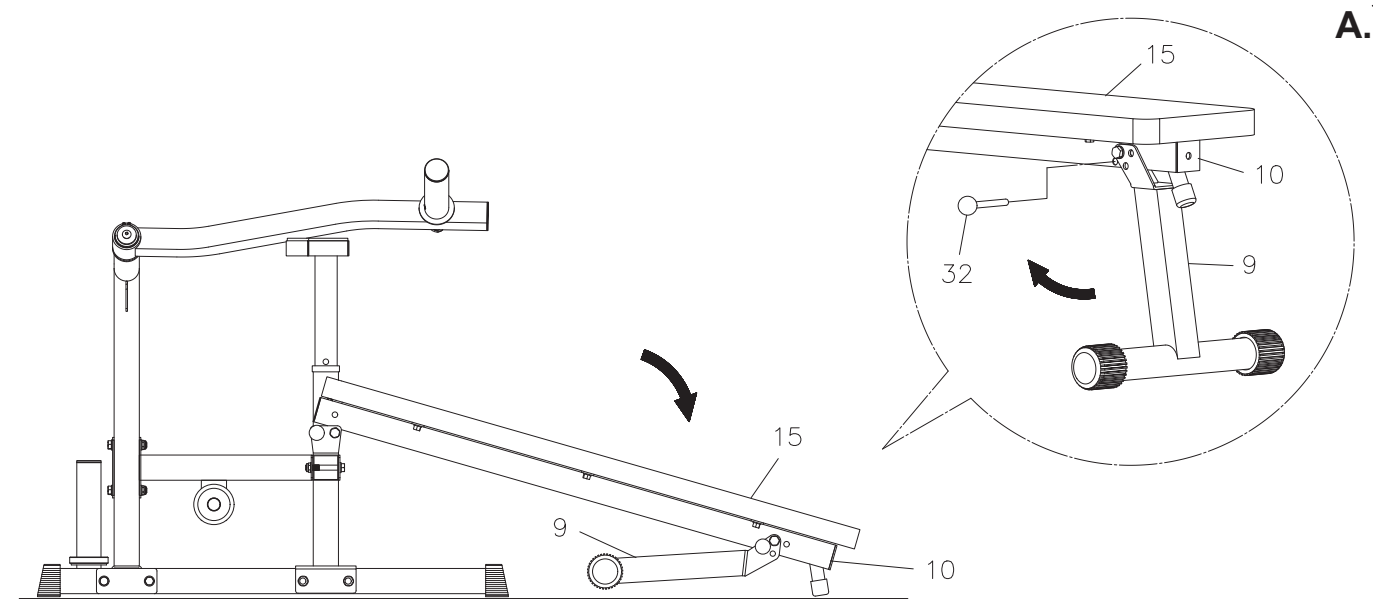

STORAGE

- To store the Bench Press Machine, simply keep it in a clean dry place.
- Use two people to lift from the **CROSS BEAM(4)** and the stabilizer of the **FRONT RISER(9)** to move the Bench Press Machine.
- Follow the illustrated process below to fold the Bench Press Machine.
 1. Refer to illustration 1. Remove the **BALL PIN(32)** from the back end of the **CUSHION SUPPORT FRAME(10)**. Refer to illustration 2. Fold up the **CUSHION ASSEMBLY(15)** and lock in the folded position with the **BALL PIN(32)**.
 2. Refer to illustration 2. To fold the **FRONT RISER(9)** by pulling out the **BALL PIN(32)**, then fold down the **FRONT RISER(9)** and lock in folded position with the **BALL PIN(32)**.

NOTE: Make sure the **BALL PINS(32)** go through the holes on both sides of the brackets on the **MAIN FRAME(3)** and the **FRONT RISER(9)**.

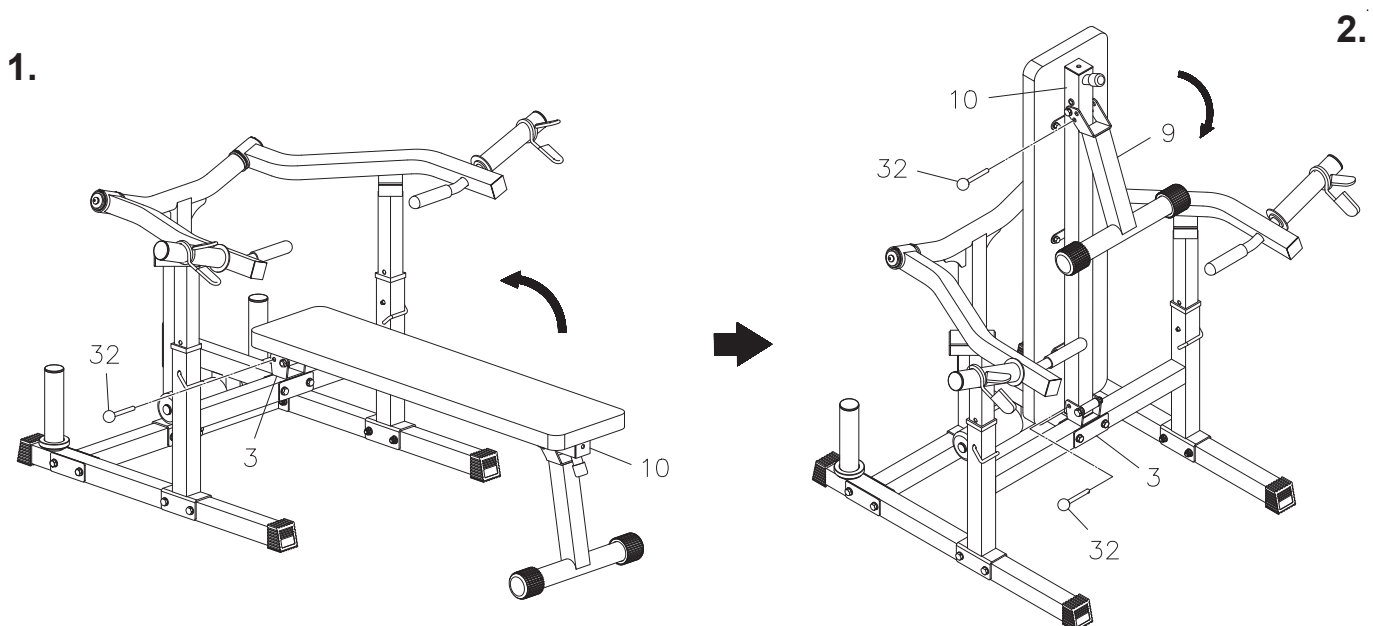

MAINTENANCE

The safety and integrity designed into the Bench Press Machine can only be maintained when the Bench Press Machine is regularly examined for damage and wear. Special attention should be given to the following:

- Verify that the **CAUTION LABEL(49)** is in place and easy to read. Call Stamina Products immediately at 1-800-375-7520 for a replacement **CAUTION LABEL(49)** if it is missing or damaged.
- It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
- Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Securely tighten loose nuts and bolts.
- Worn or damaged components must be replaced immediately or the Bench Press Machine removed from service until repair is made.
- Only Stamina Products supplied components should be used to maintain/repair the Bench Press Machine.
- Keep your Bench Press Machine clean by wiping it off with an absorbent cloth after use.

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

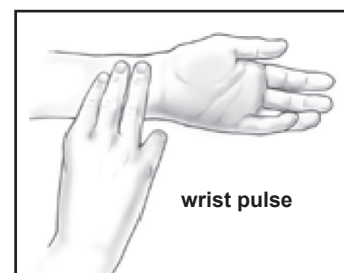

Target Heart Rate Zone Estimated by Age*

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute

* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: $220 - \text{Age} = \text{predicted maximum heart rate}$


WARM-UP and COOL-DOWN

Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool down should be completed after each strength training session.

PRODUCT PARTS DRAWING

BACK

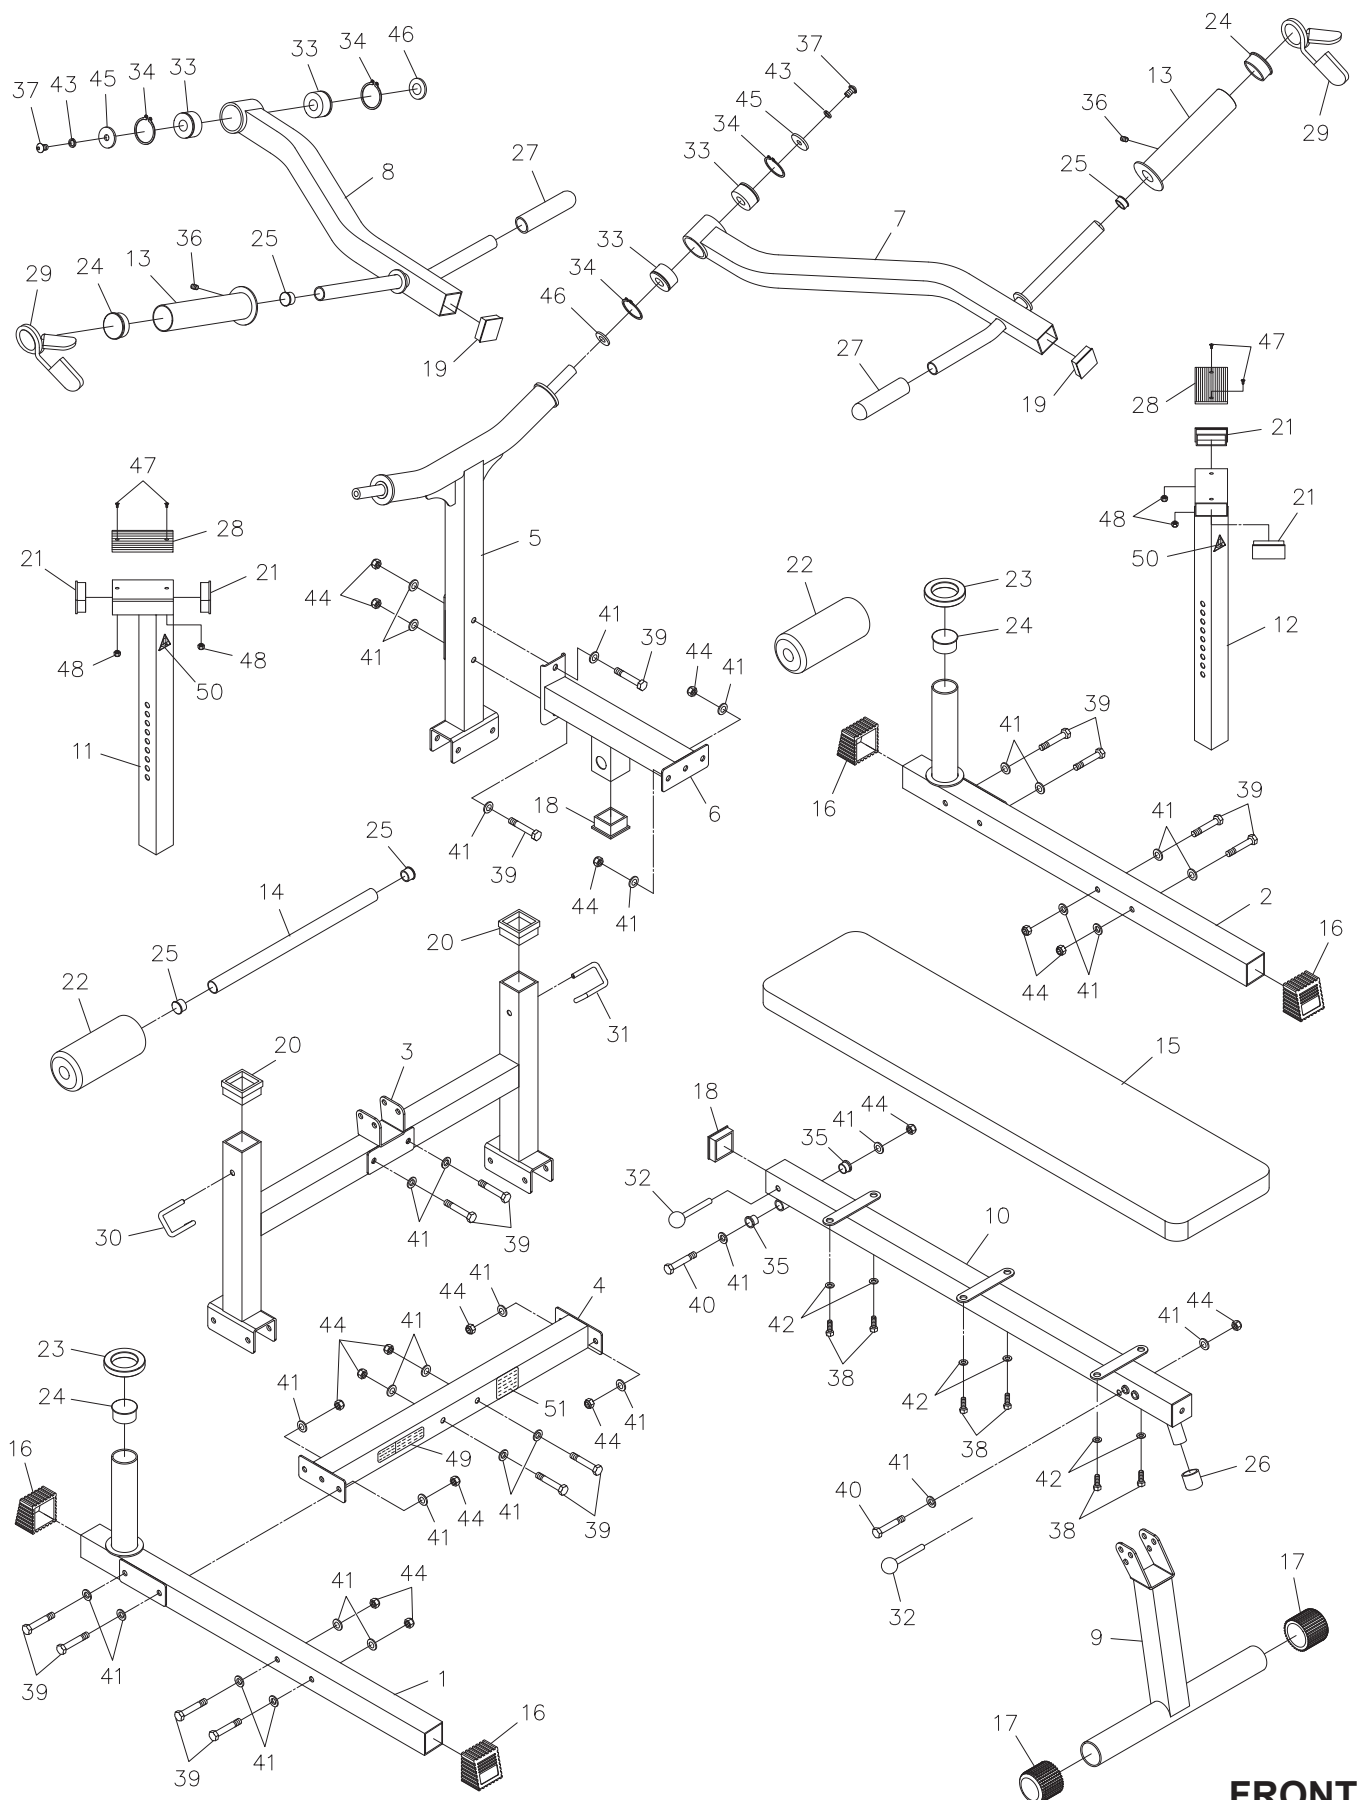

FRONT

PARTS LIST

PART#	PART NAME	QTY
1	Right Base	1
2	Left Base	1
3	Main Frame	1
4	Cross Beam	1
5	Upright	1
6	Connect Tube	1
7	Left Press Arm	1
8	Right Press Arm	1
9	Front Riser	1
10	Cushion Support Frame	1
11	Right Support Tube	1
12	Left Support Tube	1
13	Olympic Adapter	2
14	Foam Rod	1
15	Cushion	1
16	Endcap (50 x 50mm)	4
17	Round Endcap (ø50mm)	2
18	Square Plug (50 x 50mm)	2
19	Square Plug (45mm)	2
20	Square Sleeve	2
21	Rectangle Plug (30 x 60mm)	4
22	Foam Pad	2
23	Bumper	2
24	Round Plug (ø48mm)	4
25	Round Plug (ø25mm)	4
26	Round Cap (ø25mm)	1
27	Hand Grip	2
28	Support Cover	2
29	Quick Clip (ø48mm)	2
30	Right Safety Hook	1
31	Left Safety Hook	1
32	Ball Pin	2
33	Arm Bushing	4
34	C Ring	4
35	Bushing	2
36	Set Screw (M8 x 1.25 x 10mm)	2
37	Bolt, Button Head (M10 x 1.5 x 15mm)	2
38	Bolt, Hex Head (M8 x 1.25 x 16mm)	6
39	Bolt, Hex Head (M10 x 1.5 x 70mm)	14
40	Bolt, Hex Head (M10 x 1.5 x 80mm)	2
41	Washer (M10)	32
42	Washer (M8)	6
43	Lock Washer (M10)	2
44	Nylock Nut (M10 x 1.5)	16
45	Large Washer (ø11 x ø36 x 3mm thick)	2
46	Large Washer (ø20.5 x ø32 x 1.5mm thick)	2
47	Screw, Flat Head (M5 x 0.8 x 16mm)	4
48	Nylock Nut (M5 x 0.8)	4
49	Caution Label	1
50	Pinch Point Decal	2
51	Serial Decal	1
52	Allen Wrench (5.5mm)	1
53	Allen Wrench (4mm)	1
54	Manual	1

LIMITED WARRANTY

MODEL 50-3100

WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. **THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA.** Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 4435 West Manufacturers Street, Springfield, Missouri, USA, MO 65803, or email us at customer.care@staminaproducts.com, or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.

NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER. These warranties are not transferable. **IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY.** If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina **SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.**

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. **ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at **customer.care@staminaproducts.com** or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



**ONLINE
CUSTOMER CARE**
customer.care@staminaproducts.com
www.staminaproducts.com



**TELEPHONE
CUSTOMER CARE**
Tel: 1 (800) 375-7520



**FAX
CUSTOMER CARE**
Fax: (417) 889-8064



MAIL
STAMINA PRODUCTS, INC.
ATTN: Customer Care
4435 West Manufacturers Street, Springfield, MO 65803

Would you like to receive email information or special offers from Stamina Products? Register at contact.staminaproducts.com

TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to register.staminaproducts.com. Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 4435 West Manufacturers Street, Springfield, MO 65803.

PRODUCT REGISTRATION FORM

Stamina Products, Inc.
4435 West Manufacturers Street, Springfield, MO 65803

Model Number: Serial Number:
Product Name:
Place Purchased:
Date of Purchase: Purchase Price:
First Name: Last Name:
City: State: Zip Code:
Email Address: Phone #: ()
Would you like to receive email information or special offers from Stamina Products?* ☐ Yes ☐ No *If yes, be sure your email address is included above.



Detach and Mail or Fax the Form Above



TO ORDER PARTS

If there are missing or damaged parts, you can go to parts.staminaproducts.com and order those parts. If you have questions, please contact customer care. Do not return the product. To order parts by mail, fill out the sheet below and fax it to 417-889-8064. The part will be mailed to your address.



Detach and Mail or Fax the Form Below



PARTS ORDER FORM

Stamina Products, Inc.
4435 West Manufacturers Street, Springfield, MO 65803

Mr./Ms:
Address: Apt. #:
City: State: Zip Code:
IMPORTANT : We require your phone number to process the order!
Phone #: () Work Phone #: ()
Date of Purchase:
Model #:
Purchased From:

**IMPORTANT: Before filling out the portion below, make sure you have the correct information.
Refer to the parts list to make sure you're ordering the right parts!**

PART #	DESCRIPTION	QUANTITY
EXAMPLE: 1	Rear Unit Assembly	1